



SONY®

HD Camera

Instruction Manual

Before use

- Carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference.
- Always update your PlayStation®5 system software to the most recent version.

Precautions

Safety

Small children injuries

Keep the product out of the reach of small children. Small children might damage the product causing it to malfunction, swallow small parts, wrap the cables around themselves or accidentally injure themselves or others.

Use and handling

- Do not allow liquid or small particles to get into the product.
- Do not touch the product with wet hands.
- Do not touch the product during an electrical storm.
- Do not throw or drop this product or subject it to strong physical shock.
- Do not stand on or put objects on the product.
- Do not touch the inside of the connector or insert foreign objects.

- Do not let any other metal items come into contact with the connectors.
- If there are pieces of dust or foreign objects on the connectors, remove them with a dry cloth before connecting.
- Never disassemble or modify the product.
- Avoid prolonged use of this product. Take a 15-minute break during each hour of play.

Cleaning

Follow the instructions below to help prevent the product exterior from deteriorating or becoming discoloured.

- Wipe with a soft, dry cloth.
- Do not apply insecticides or other volatile substances.
- Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
- Do not use solvents or other chemicals. Do not wipe with a chemically-treated cleaning cloth.

Storage conditions

 
 
- Do not expose the product to high temperatures, high humidity or direct sunlight during operation, transportation and storage.
- Do not leave the product in a car with the windows closed, particularly in hot weather.
- Do not expose the product to dust, smoke or steam.

Connecting and installing


Connect the camera to the USB Type-A port on the back of your PS5™ console, and then center the camera on top or in front of your TV.

Placing the camera on top of a TV

Adjust the stand to prevent the camera from falling.

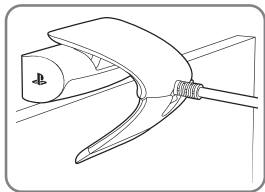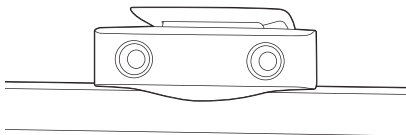


Placing the camera in front of a TV

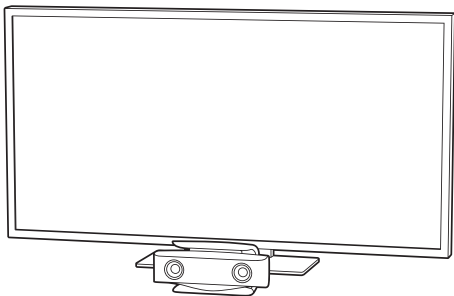 

Hints

 - If the camera is not recognised by your PS5 console, disconnect the camera cable, and then reconnect it. If the camera is still not recognised, turn off the PS5 console, and then turn it on again.
- If the lenses of the camera become dirty, wipe them with a soft cloth.
- Adjust the angle by rotating the camera.



Specifications

Input Power Rating	5 V \approx 300 mA
External dimensions	Approx. 100 × 41 × 75 mm (width × height × depth)
Mass	Approx. 192 g
Video pixels	1920 × 1080 pixels
Camera range	40 cm - ∞ /83.2 °
Cable length	Approx. 2 m
Operating temperature	5 °C to 35 °C
Country of production	China

Design and specifications are subject to change without notice.

GUARANTEE

This product is covered for 12 months from date of purchase by the manufacturer's guarantee. Please refer to the guarantee supplied in the PS5 package for full details.

This product has been manufactured by or on behalf of Sony Interactive Entertainment Inc., 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan.

Imported into Europe and Distributed by Sony Interactive Entertainment Europe Limited, 10 Great Marlborough Street, London, W1F 7LP, United Kingdom.

The Authorised Representative for issuing and holding Declarations of Conformity is Sony Belgium, bijkantoor van Sony Europe B.V., Da Vincilaan 7-D1, 1930 Zaventem, Belgium.

For customers in Europe and Turkey.



Where you see this symbol on any of our electrical products or packaging, it indicates that the relevant electrical product should not be disposed of as general household waste in the EU, Turkey, or other countries with separate waste collection systems available. To ensure correct waste treatment, please dispose of them via an authorised collection facility, in accordance with any applicable laws or requirements. Waste electrical products may also be disposed of free of charge via retailers when buying a new product of the same type. Furthermore, within EU countries larger retailers may accept small waste electronic products free of charge. Please ask your local retailer if this service is available for the products you wish to dispose of. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste.

"PS" logo, "PlayStation" and "PS5" are registered trademarks or trademarks of Sony Interactive Entertainment Inc.

"SONY" and "SONY INTERACTIVE ENTERTAINMENT" are registered trademarks or trademarks of Sony Corporation.



Sony
Interactive
Entertainment



[playstation.com](https://www.playstation.com)

© 2020 Sony Interactive Entertainment Europe Limited.
All rights reserved.