

Online user's guide

eu.playstation.com/psp/support/manuals

PSP® official site

eu.playstation.com/psp

Support

eu.playstation.com/support

SONY®



PlayStation®Portable

Instruction Manual



© 2011 Sony Computer Entertainment Inc. All rights reserved.



4 - 2 9 4 - 4 0 6 - 5 1

Printed in China

PSP-E1002
PSP-E1003

4-294-406-51(1)

Table of contents

Warning and caution

WARNING.....	4
Precautions.....	6

Using the PSP® system

Part names and functions.....	10
Charging the battery.....	12
Turning the system on and off	15
Using the XMB™ (XrossMediaBar) menu.....	16
Playing Universal Media Disc games.....	18
Playing Memory Stick Duo™ content.....	19
Using the on-screen keyboard.....	20
Setting the parental control level.....	22
Updating the system software	24
Downloading games	26

Support

Troubleshooting	28
GUARANTEE	33

Additional Information

Before disposing of or transferring the PSP® system.....	37
Specifications.....	38
Compatible media.....	40
Copyright and trademarks	42

PSP® system documentation

You can find information about the PSP® system in this manual as well as online.

- **Instruction Manual (this document)**

This manual explains hardware features and provides basic information about how to set up and operate the PSP® system and how to start playing games. The manual also includes warnings and precautions for the safe and proper use of the system.

- **User's Guide**

This online guide contains detailed information about using PSP® system features. You can view the online user's guide using a PC Web browser.

eu.playstation.com/psp/support/manuals

Information about system functionality and images published in this document may vary from those for your PSP® system, depending on the system software version in use.

WARNING

**To avoid electrical shock, do not open the cabinet.
Refer servicing to qualified personnel only.**

Use the supplied AC adaptor only. If you use other types, it may cause fire, electrical shocks or a malfunction.

CAUTION - Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CLASS 1 LASER PRODUCT
LASER KLASSE 1 PRODUKT

This appliance is classified as a CLASS 1 LASER product under IEC60825-1+A2: 2001.

- This product is intended for ages 6 and up.
- Avoid prolonged use of the PSP® system. To help prevent eye strain, take a break of about 15 minutes during every hour of play.

- If you experience any of the following health problems, discontinue use of the system immediately. If symptoms persist, consult with your doctor.
 - Dizziness, nausea, fatigue or symptoms similar to motion sickness
 - Discomfort or pain in a part of the body, such as eyes, ears, hands or arms

FOR CUSTOMERS IN THE UNITED KINGDOM

Regulatory information

- The nameplate is located inside the disc cover of the system.



The manufacturer of this product is Sony Computer Entertainment Inc., 1-7-1 Konan, Minato-ku, Tokyo 108-0075 Japan. The Authorised Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany.

Distributed in Europe by Sony Computer Entertainment Europe Ltd, 10 Great Marlborough Street, London, W1F 7LP.

Photosensitivity

Always play in a well lit environment. Take regular breaks, 15 minutes every hour. Avoid playing when tired or suffering from lack of sleep. Some individuals are sensitive to flashing or flickering lights or geometric shapes and patterns, may have an undetected epileptic condition and may experience epileptic seizures when watching television or playing videogames. Consult your doctor before playing videogames if you have an epileptic condition and immediately should you experience any of the following symptoms whilst playing: dizziness, altered vision, muscle twitching, other involuntary movement, loss of awareness, confusion and/or convulsions.

Repetitive Motion Injuries

Avoid prolonged use of the PSP® system. Take a 15 minute break every hour. Stop using the PSP® system immediately if you experience an unpleasant sensation or pain in your hands, wrists or arms. If the condition persists, consult a doctor.

Headphones

Adjust your headphone volume so that surrounding sounds can be heard. If you experience ringing or any discomfort in your ears, discontinue use of your Headphones.

System Software

The System Software included within this product is subject to a limited licence from Sony Computer Entertainment Inc. Refer to <http://www.scei.co.jp/psp-eula/> for further details.

About national export control

This product may fall within the scope of national export control legislation. You must comply fully with the requirements of such legislation and of all other applicable laws of any jurisdiction in relation to this product.

Precautions

Before using this product, carefully read this manual and retain it for future reference.

Accessory compatibility

Do not use accessories or peripherals that are intended for another model of the PSP® system, as these accessories/peripherals may not be compatible with your system. Visit <http://eu.playstation.com/psp> for details.

Safety

This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential for causing fire, electrical shock or personal injury. To help ensure accident-free operation, follow these guidelines:

- Observe all warnings, precautions and instructions.
- Regularly inspect the AC adaptor.
- Stop use, unplug the AC adaptor from the electrical outlet and disconnect any other cables immediately if the device functions in an abnormal manner, produces unusual sounds or smells or becomes too hot to touch, or has become misshapen.

Use and handling

- Use in a well-lit area and keep the screen a safe distance from your face.
- Keep the system and accessories out of the reach of small children. Small children may swallow the Memory Stick Duo™ media or wrap the cables/straps around themselves, which may inflict injury or cause an accident or a malfunction.
- Do not use the system while driving or riding a bicycle.
- Do not use the system or accessories near water.
- Use only attachments/accessories specified by the manufacturer.
- Do not expose the system or accessories to high temperatures, high humidity, or direct sunlight.
- Do not leave the system or accessories in a car with the windows closed (particularly in summer).
- Do not expose the system or accessories to dust, smoke or steam.
- Do not allow liquid or small particles to get into the system or accessories.
- Do not place the system or accessories on surfaces that are tilted, unstable or subject to vibration.
- Do not throw, drop or step on the system or accessories, and do not subject the devices to strong physical shock. Sitting down with the PSP® system in a pocket or placing the system in the bottom of a backpack along with heavy objects may cause damage to the system.

- Do not forcibly twist the PSP® system or expose the system to strong physical shock during gameplay, as doing so can damage the system.
 - Handle the analog stick with care.
 - Do not put heavy objects on the system or accessories.
 - Do not touch or insert foreign objects into the connectors of the system or accessories.
 - Depending on the conditions of use, the system or AC adaptor may reach temperatures of 40°C or more. Do not touch the system or AC adaptor for an extended period of time under these conditions. Extended contact under these conditions may cause low-temperature burns*.
- * Low-temperature burns are burns that occur when the skin is in contact with objects of relatively low temperatures (40°C or more) for an extended period of time.

AC adaptor use


- For your safety, use only a supplied AC adaptor. Other types may cause fire, electrical shocks or a malfunction.
- Do not touch the plug of the AC adaptor with wet hands.
- Do not touch the AC adaptor or the system, if connected to an electrical outlet, during an electrical storm.
- Do not allow dust or foreign matter to build up around the system or accessory connectors. If there is dust or foreign matter on the system's connectors or the AC adaptor, wipe it off with a dry cloth before connecting. Dust or other matter on the connectors can result in fire or electrical shock.
- Unplug the AC adaptor from the electrical outlet and disconnect any other cables from the system before cleaning or when you do not intend to use the system for an extended period of time.
- Protect the AC adaptor from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the system.
- When disconnecting the AC adaptor, hold it by the plug and pull straight out from the electrical outlet. Never pull by the cord and do not pull at an angle.
- Do not use the system to play games or video when the system is covered with any type of fabric. If you want to pause or temporarily store the system while playing games or video, put the system in sleep mode before placing it in the case or covering. Also do not use the AC adaptor when covered with fabric to help avoid overheating.
- Do not connect the AC adaptor to a voltage transformer or inverter. Connecting the AC adaptor to a voltage transformer for overseas travel or an inverter for use in an automobile may cause heat to build up in the AC adaptor and may cause burns or a malfunction.

LCD screen

- The LCD screen is made of glass and may crack if subjected to excessive force.
- Pixels that are not lit or are continuously lit may appear in certain locations on the LCD screen. The appearance of such spots is a normal occurrence associated with LCD screens and is not a sign of a system malfunction. LCD screens are made using highly precise technology. However, a very small number of dark pixels or continuously lit pixels exist on each screen. Also, a distorted image may remain on the screen for several seconds after the system has been turned off.
- Direct exposure to sunlight may damage the system's LCD screen. Be careful when using the system outdoors or near a window.
- When using the system in a cold environment, you may notice shadows on the graphics or the screen may appear darker than usual. This is not a malfunction, and the screen will return to normal when the temperature goes up.
- Do not leave still images displayed on the screen for an extended period of time, as doing so may cause a faint image to be left permanently on the screen.

About the "pickup"

Do not touch the "pickup" located inside the disc cover of the system. Touching the pickup may damage the system.

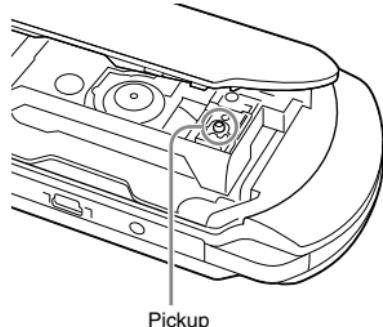

Never disassemble the system or accessories

Use the PSP® system and accessories according to the instructions in this manual. No authorisation for the analysis or modification of the system, or the analysis and use of its circuit configurations, is provided. Disassembling will void the system warranty and may be harmful. The LCD screen, in particular, contains dangerous, high-voltage parts, and the laser beam for reading Universal Media Disc may cause visual impairment if exposed directly to the eyes.

Moisture condensation

If the PSP® system or Universal Media Disc is brought directly from a cold location to a warm one, moisture may condense on the lens inside the system or on the Universal Media Disc. Should this occur, the system may not operate properly. In this case, remove the Universal Media Disc and turn off and unplug the system. Do not put the Universal Media Disc back in until the moisture evaporates (this may take several hours). If the system still does not operate properly, contact the appropriate PSP® customer service helpline which can be found within every PSP® format software manual.

Universal Media Disc handling

- Do not touch the opening on the rear of the disc (recorded surface of the disc) with your fingers.
- Do not allow dust, sand, foreign objects or other types of dirt to get on the disc.
- If the Universal Media Disc becomes dirty, gently wipe the exterior and recorded surfaces of the Universal Media Disc using a soft cloth. Do not use solvents or other chemicals.
- Do not use a Universal Media Disc that is cracked or warped or has been repaired. The Universal Media Disc may break inside the PSP® system, leading to injury or malfunction.

Handling and care of exterior surfaces

Follow the guidelines listed below to help avoid deterioration or discolouration of the PSP® system.

- Do not use solvents or other chemicals to clean the exterior surface.
- Do not allow the system to remain in direct contact with rubber or vinyl products for an extended period of time.

- Do not use a chemically-treated cleaning cloth to wipe off the system.

Before using the analog stick

- Do not attempt to remove the analog stick from the system front, as doing so will damage the system and may result in injury.
- For best results, go to  (Settings) ➔  (System Settings), and then with the [System Information] screen displayed, rotate the analog stick in a circular motion to adjust the analog stick's range of movement.

Cleaning

For safety reasons, unplug the AC adaptor from the electrical outlet and disconnect any other cables before cleaning the system.

Cleaning the exterior surface and LCD screen

Wipe gently with a soft cloth.


Cleaning the connectors

If the connectors on the PSP® system or on the USB cable become dirty, signals may not be sent or received properly. Also, if the connector on the headphones becomes dirty, you may experience noise or interruptions in sound. Wipe the connectors with a dry, soft cloth to keep in clean condition.


Cases and coverings

When placing the PSP® system in a commercially available case, turn off the power or put the system in sleep mode. Do not use the system while it is in the case. Leaving the system on, or using it while in a case or covering may cause overheating or may damage the system.

Part names and functions

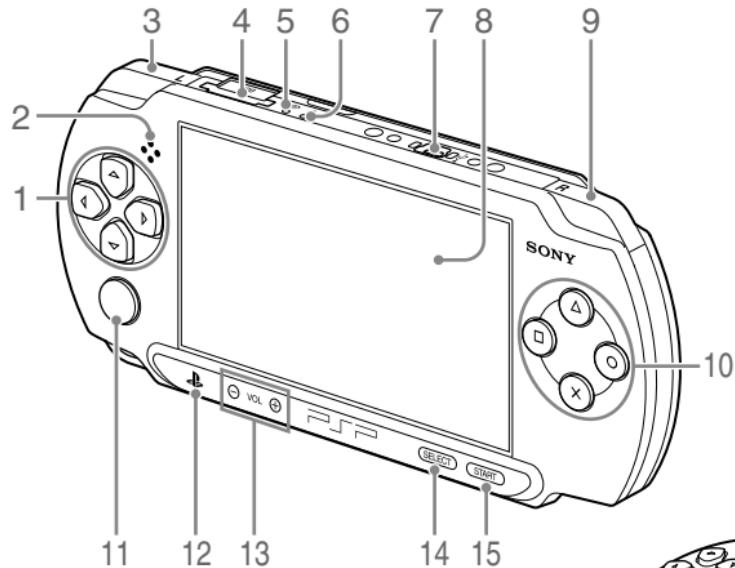

System bottom

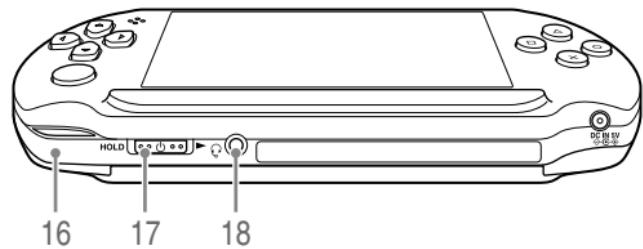

1 Directional buttons**2 Speaker****3 L button****4 Memory Stick PRO Duo™ slot****5 Memory Stick PRO Duo™ access indicator**

Lights up when data is being read or written from Memory Stick Duo™ media

Notice

When the Memory Stick PRO Duo™ access indicator is lit, do not eject the Memory Stick Duo™ media, turn off the system, or put the system into sleep mode, as doing so may cause data loss or corruption.

6 POWER indicator

- Solid green

Power on

- Solid orange

Charging

- Flashing green

Charge level low

- Light off

Power off/In sleep mode

7 USB connector**8 LCD screen****9 R button****10 △ button, ◎ button,**


⊗ button, ⊙ button

11 Analog stick

For use with games that support analog stick operation

12 PS button**13 Volume button****14 SELECT button****15 START button****16 Strap holder**

Attach a strap (sold separately) as shown below.

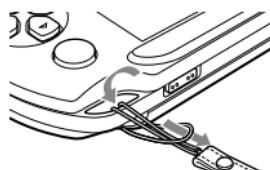**17 POWER/HOLD switch****Slide right**

Turn the system on and off (→ page 15).

Slide left

Lock the system buttons.

18 Headset connector

Charging the battery

Before using the PSP® system for the first time after purchase, or when the battery charge level is low, follow the steps below to charge the battery.


Caution

- Stop use, unplug the AC adaptor from the electrical outlet and disconnect any other cables immediately if the device functions in an abnormal manner, produces unusual sounds or smells or becomes too hot to touch, or has become misshapen.
- Do not plug the AC adaptor for the PSP® system into an electrical outlet until you have made all other connections.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

Charging methods

Charging with an AC adaptor*

The system's battery can be charged using an AC adaptor.

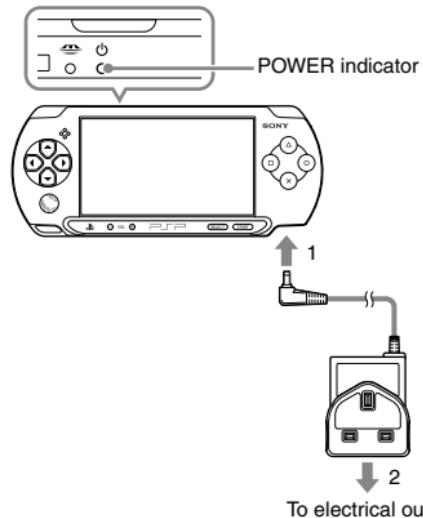


The power indicator lights up in orange, indicating that charging has begun. The power indicator turns off when the battery is fully charged.

* Some regions and countries may use a different AC Adaptor from the one illustrated.

Charging with a USB device

When you turn on the PSP® system and then connect it to a device equipped with a USB connector (such as a PC), the system's battery will begin charging. While the battery is charging, the POWER indicator will be lit in orange and [USB Mode] will be displayed on the screen.

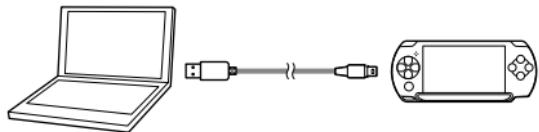


Hints

- You cannot charge the PSP® system using a USB device while playing a game or performing other operations. Use the AC adaptor to charge the battery in such situations.
- To switch to USB mode manually, select (Settings) → (USB Connection).
- Charging may take longer when the system is turned on during charging or when a USB device is used for charging.
- You may not be able to charge the battery if the USB device or the USB hub does not provide enough power for charging. Try connecting to a different USB device or a different USB connector on the device.

Information about the battery charge

Checking the battery charge level

You can check the battery charge level by the icon displayed in the upper right corner of the screen.

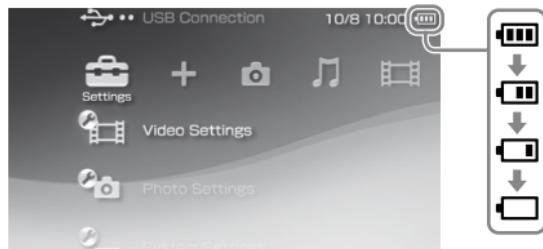

When there is little battery charge left, the icon is displayed and the power indicator flashes green. If this happens, charge the battery.

Hint

Depending on usage conditions and environmental factors, the charge level may not reflect the exact charge level.

Estimating the battery charge time*

Charging with the AC adaptor	Approximately 2 hours 20 minutes
Charging with a USB device	Approximately 4 hours

* When charging a battery with no charge remaining

Hint

It is recommended that you charge the battery in an environment with a temperature of 10°C to 30°C. Charging in other environments may not be as effective and may lead to less than optimal battery performance.

Estimated battery duration

Gameplay	Approximately 3 - 5 hours* ¹
Video playback	Approximately 3 - 4 hours* ²

*¹ Based on tests conducted with the system in single player mode, with headphones in use.

*² Based on tests conducted using variables of system speakers versus headphones, volume level and screen brightness level.

Battery life

The built-in battery has a limited life span. Battery duration will decrease with repeated usage and age.

When battery duration becomes noticeably short, contact the appropriate PSP® customer service helpline. Details are found within the contact information section at <http://eu.playstation.com/support>.


Hint

Battery life span varies depending on how the battery is stored and the conditions of use, including long-term environmental factors such as temperature.

Turning the system on and off

Turning the system on

- 1 Slide the POWER/HOLD switch to the right.

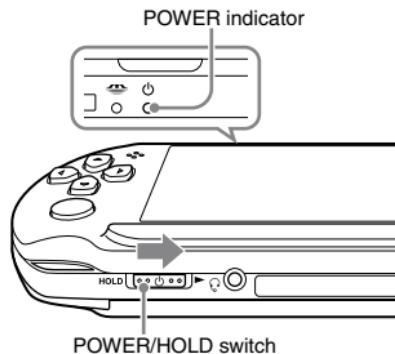

The POWER indicator lights up in green.

Turning the system off

- 1 Slide and hold the POWER/HOLD switch to the right. for more than three seconds.

The POWER indicator turns off.

Putting the system in sleep mode

You can pause the system while playing games or other content. Playback begins from the point where the system entered sleep mode.

- 1 Slide the POWER/HOLD switch to the right.

The POWER indicator turns off and the system enters sleep mode.

Clearing sleep mode

Slide the POWER/HOLD switch to the right.

Hint

Some software may prevent the system from entering sleep mode.


Using the XMB™ (XrossMediaBar) menu

The PSP® system includes a user interface called XMB™ (XrossMediaBar).

- 1 Select a category using the left or right button.
- 2 Select an item using the up or down button.
- 3 Press the  button to confirm a selected item.

Hint

You can cancel an operation by pressing the .

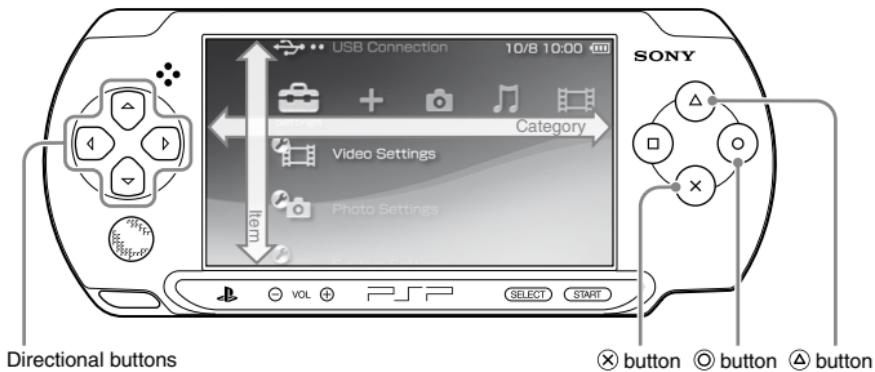

Icons displayed on the screen vary depending on the system software version.


Using the options menu

Select an icon, and then press the \textcircled{A} button to display the options menu.



Using the control panel

While playing content, press the \textcircled{A} button to display the control panel.

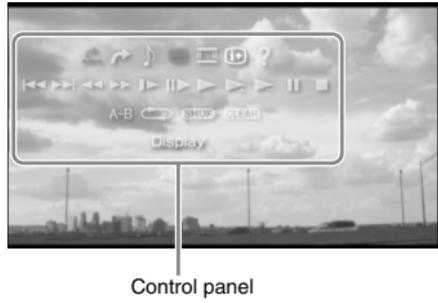

Categories



Game

Play games



Video

Watch video



Music

Listen to music



Photo

View photos



Extra

View comics




Settings

Adjust PSP® system settings

Playing Universal Media Disc games

- 1 Place your finger in the indentation on the top of the system to open the disc cover.
- 2 Insert a Universal Media Disc and close the disc cover.

Check that the disc cover is tightly closed.

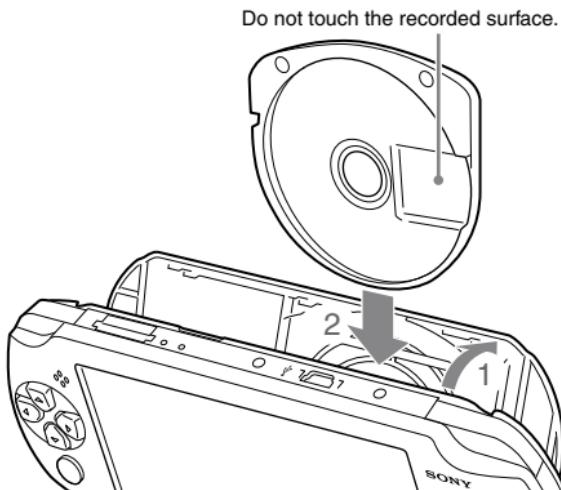

- 3 Select the icon, and then press the **×** button.


Playback begins.

Hints

- To remove the Universal Media Disc, stop playback and then open the disc cover.
- To save game data, you must first insert a Memory Stick Duo™ in the memory stick slot.

Quitting a game

Press the PS button to quit a game.

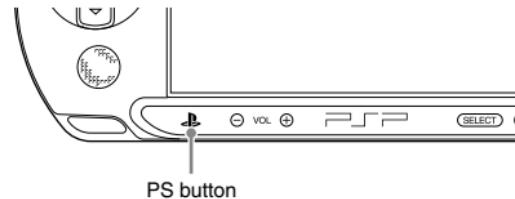


Playing Memory Stick Duo™ content

⚠ Warning

Keep Memory Stick Duo™ media out of the reach of small children, as the media could be swallowed by accident.


1 Press the Memory Stick Duo™ media until fully inserted.

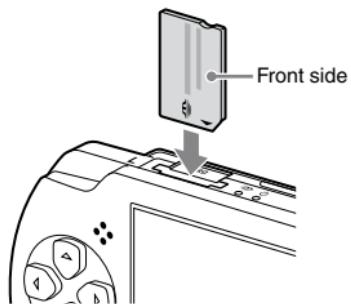

Notice

When the Memory Stick PRO Duo™ access indicator (●●● page 11) is lit, do not eject the Memory Stick Duo™ media, turn off the system, or put the system into sleep mode. Doing so may cause data loss or corruption.


2 Select the icon, and then press the \times button.

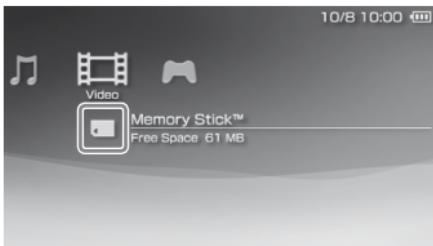


A list of content that can be played is displayed.

Hint

To remove the Memory Stick Duo™ media, press the media once in the direction of the arrow.

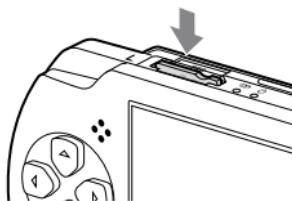

Using the on-screen keyboard

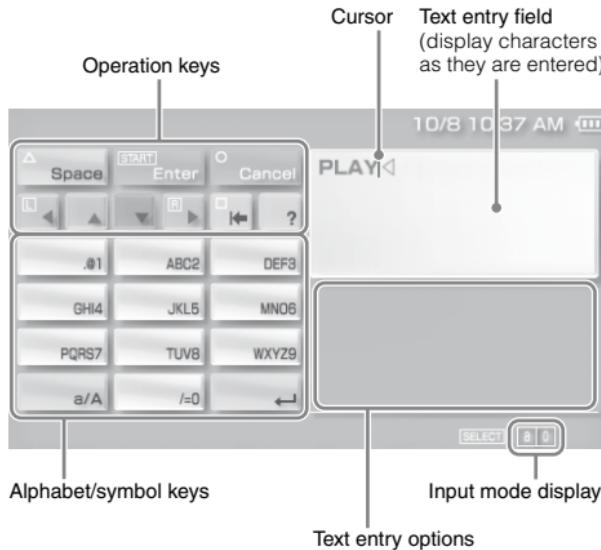

List of keys

Keys that are displayed vary depending on the input mode in use and other conditions.

keys	Explanation
△ Space	Inserts a space
START Enter	Confirms characters that have been typed but not entered, and then closes the keyboard
○ Cancel	Cancels characters that have been typed but not entered, and then closes the keyboard
□ ◀ ▲ ▼ ▶	Moves the cursor
◀	Deletes the character to the left of the cursor
?	Displays a diagram showing the system buttons and their usage
a/A	Switches between uppercase and lowercase letters
←	Inserts a line break

Switching the input mode

The number of input modes available varies depending on the language selected. Each time you press the SELECT button, the input mode changes to the options shown in the table below.

Input mode display	Input mode	Examples of characters you can enter
a 0	Letters and numbers	a b c d e
à 0	Letters and numbers (with accented letters)	é í ó ç ñ
0	Numbers only	1 2 3 4 5
URL 0	Web address shortcuts	.com .ne .html .gif

Hint

The language for the on-screen keyboard is linked to the system language. You can set the system language by going to

(Settings) ➔ (System Settings) ➔ [System Language].

For example, if [System Language] is set to [Français], you can enter text in French.

Entering characters

The following steps explain how to enter text using the word "FUN" as an example.

- 1 Select [DEF3], and then press the button several times until "F" is displayed.

Each time you press the button, the character that is entered in the text entry field is switched.

- 2 Select [TUV8], and then press the button several times until "U" is displayed.

- 3 Select [MNO6], and then press the button several times until "N" is displayed.

- 4 Select [Enter], and then press the button.

The characters you entered are confirmed. (You can also press the PSP® system's R button to confirm a character.) Select [Enter] again, and then press the button to exit the keyboard.

Hint

If you select the a/A key while entering characters, you can switch between uppercase and lowercase letters.

Setting the parental control level

The PSP® system includes a parental control feature. You can use this feature to set a password and limit the playback of content (games, videos and other content) based on the parental control level on the system.

By setting the parental control level, you can prevent the playback of restricted content by children.

A 4-digit password is required to allow playback of the restricted content and to change the parental control level. The default password is "0000" and can be reset.

To reset the password

- 1 Select  (Settings) ➔  (Security Settings) ➔ [Change Password], and then press the  button.

Follow the on-screen instructions to set the password.

To set the parental control level

- 1 Select  (Settings) ➔  (Security Settings) ➔ [Parental Control Level], and then press the  button.


The password entry screen is displayed.

- 2 Using the directional buttons, enter the 4-digit password, and then press the  button.
- 3 Select a parental control level for the PSP® system (⇒ page 23), and then press the  button.

The parental control level is set.

Information about parental control levels

The playback of content is restricted using a combination of the parental control levels of both the PSP® system and the content.

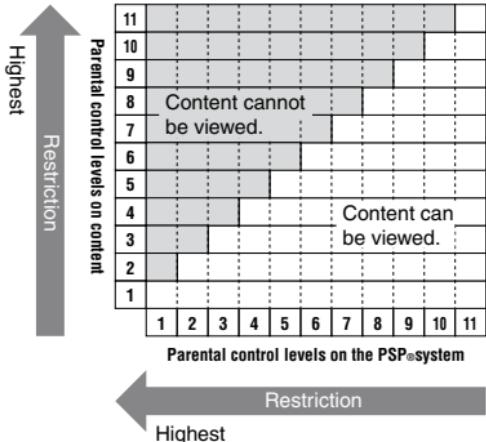

For example, if you want to restrict playback of content that is set with parental control level "5", adjust the parental control level on the PSP® system to [4].

Parental control levels on the PSP® system

The parental control level on the system can be turned off or set to one of 11 levels. The default setting is [9].


Off	Parental control is turned off.
11-1	Set the restriction level on the system. A setting of [1] is the most restrictive; [11] is the least restrictive.

Hints

- You can check the parental control level under [Information] in the options menu.
- Content that has been restricted by the parental control feature is displayed as (Restricted Content).

Updating the system software

Software updates may include security patches, new or revised settings and features, and other items, which will change your current operating system. It is recommended that you always maintain your system to use the latest version of the system software.

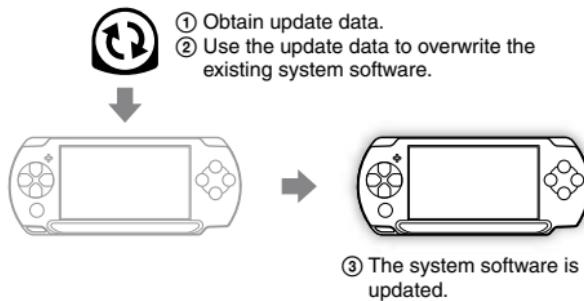

Notice

During an update:

- Do not remove the Universal Media Disc.
- Do not turn off the system.
- Do not disconnect the AC Adaptor.

If an update is cancelled before completion, the system software may become damaged, and the system may require servicing or exchange.

Hints

- For the latest information on updates, visit eu.playstation.com/psp
- Depending on the software title, you may not be able to play without first updating the PSP® system software.
- After you have updated the system software, you cannot go back to an earlier version.
- Before starting, check that the battery is charged. You may not be able to start an update if the battery charge level is low.

Checking the system software version

You can check system software version information by selecting (Settings) ➔ (System Settings) ➔ "System Information". The current version is displayed in the "System Software" field.

Update methods

You can perform an update in any of the following ways.

Update using a Universal Media Disc

You can update using a Universal Media Disc that contains update data.

- 1 Connect the AC Adaptor to the PSP® system.**
- 2 Insert a Universal Media Disc that contains update data.**

The update data icon and version number are displayed under  (Game) in the Home Menu.



- 3 Select  (PSP™ Update), and then press the .**

The update begins. Follow the on-screen instructions to complete the update.

Update using a PC

Update using a PC to download update data from the Internet. For detailed instructions, visit eu.playstation.com/psp

Downloading games

Using Media Go, you can download (purchase) games from PlayStation®Store. To use PlayStation®Store, you need to connect your PC to the Internet.

Media Go download
mediago.sony.com/

What is Media Go?

Media Go is a PC application that you can use to do the following:

- Download (purchase) games from PlayStation®Store
- Import tracks from an audio CD
- Manage music, photo and video files
- Transfer content (Media Go ↔ PSP® system)
- Back up game data and saved data


To access PlayStation®Store

Click [Store] in the library navigation pane located on the left side of the Media Go window on your PC.



Steps to download games

To download games from PlayStation®Store, you must perform the following steps.

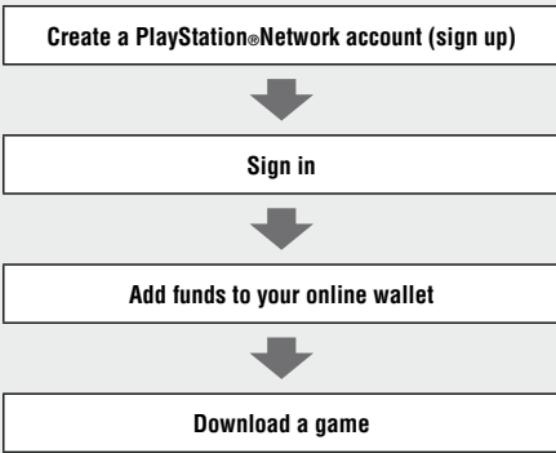

For details, refer to the online user's guide.

PlayStation®Store User's Guide

manuals.playstation.net/document/storeindex.html

Hints

- To download games, you must first insert a Memory Stick Duo™ into the Memory Stick PRO Duo™ slot of the PSP® system, then connect it to your PC using a USB cable.
- You can also download (purchase) games from PlayStation® Store via the PS3™ system.

Troubleshooting

Go through this section if you experience difficulty in operating the PSP® system. Should any problem persist, please visit our Help and Support pages at <http://eu.playstation.com/support>.

Power, battery and charging issues

The PSP® system does not turn on.

- The battery charge may have run out. Charge the battery.

The battery does not charge, or does not fully recharge.

- When using the AC adaptor to charge the battery, check the following:
 - The AC adaptor is fully inserted into the electrical outlet.
 - The correct AC adaptor for this product is being used.
- When using a USB device connected to the system to charge the battery, check or make note of the following:
 - The USB cable is fully inserted into the system and the USB device.
 - The USB device is turned on.

- The system is set to USB mode. If [USB Mode] is not displayed on the screen, select (Settings) ➔ (USB Connection).
 - Some USB devices cannot be used to charge the battery. For details, see "Charging methods" (⇒ page 12).
 - During gameplay and other operations, the battery cannot be charged using a USB device.
- The battery may not charge efficiently or charging may take longer depending on the usage conditions and environmental factors. For details, see "Information about the battery charge" (⇒ page 13).
- Check that the AC adaptor and USB cable connectors are clean. If the connectors are dirty, wipe them with a soft, dry cloth.

The battery charge doesn't last long.

- The charge may run out sooner depending on the storage method, usage conditions or environment factors. For details, see "Information about the battery charge" (⇒ page 13).

The PSP® system is misshapen.

- The battery inside the PSP® system may bulge as the battery ages. Contact the appropriate PSP® customer service helpline. Details are found within the contact information section at <http://eu.playstation.com/support>.

Picture

The screen suddenly turns dark.

- If  (Power Save Settings) → [Backlight Auto-Off] has been set, the LCD screen's backlight will automatically turn off if the system is left inactive for the set amount of time.
- If  (Power Save Settings) → [Auto Sleep] has been set, the system will automatically enter sleep mode if left inactive for the set amount of time.

Pixels that are not lit or are continuously lit on the screen do not disappear.

- LCD screens are made with highly precise technology, but in some cases, pixels that are not lit or are continuously lit may appear on the screen. This is not a system malfunction. For details, see "Precautions" (⇒ page 6).

The colour of the screen does not look right.

- The background colour may be set to change automatically at the beginning of each month. You can adjust this setting under  (Theme Settings).

Sound

There is no sound.

- Check that the volume on the system is not set to zero. Try raising the volume by pressing the volume + button on the top of the system.

- When headphones are connected, no sound is output from the PSP® system speakers.

The volume does not turn up.

- If  (Sound Settings) → [AVLS] is set to [On], the maximum volume level is restricted.
- The ear friendly Headphones are specifically designed to limit sound pressure level to a maximum of 90dB.

The headphones do not emit sound or the sound contains noise.

- Check that the headphones are fully inserted.

Universal Media Disc

The system does not recognise the Universal Media Disc.

- Slide the POWER/HOLD switch right and hold it for at least three seconds until the POWER indicator turns off. Power will be completely cut off. After that, turn the system back on.

Memory Stick Duo™

The Memory Stick Duo™ cannot be inserted.

- Set the Memory Stick Duo™ in the proper direction when inserting.

- Check that media of a type that can be used with the PSP® system is inserted. For details, see "Compatible media" (⇒ page 40).

The system does not recognise the Memory Stick Duo™.

- If Memory Stick Duo™ media is formatted using a PC, it may not be recognised by the PSP® system. If this happens, copy any data you want to keep on the PC, and then go to  (System Settings) ⇒ "Format Memory Stick™" and re-format.
- Check that the Memory Stick Duo™ is properly inserted. Try taking out the Memory Stick Duo™ and reinserting it.

The system can't save or load data.

- There may be a problem with the Memory Stick Duo™. Try using another Memory Stick Duo™, if available.

Video

Videos do not play.

- Some types of data may not be able to be played.

The system does not recognise a video file.

- Video data of types that are not compatible with the PSP® system will not be recognised.
- If the file name or folder name is changed, or if the file or folder is moved to another location using a PC, the system may not recognise it.

Music

Music does not play.

- The playback methods may be limited for some music data that is distributed through the Internet. In such cases, the data may not be able to be played on the PSP® system.

The system does not recognise a music file.

- Check that the music data is saved in the correct folder. For details, refer to the online user's guide (⇒ page 3).
- Music data of types that are not compatible with the PSP® system will not be recognised.

Photo

Images do not display.

- Depending on the image data size, certain images may not be viewable.
- If images are edited using a PC, they may not be viewable.

The system does not recognise an image file.

- Check that the data is saved in the correct folder. For details, refer to the online user's guide (⇒ page 3).
- If the file name or folder name is changed, the system may not recognise it.
- Images that are not compatible with the PSP® system will not be recognised.

Other issues

The system or AC adaptor is warm.

- During use, the system or AC adaptor may become warm. This is not a malfunction.

The system is turned on, but does not operate.

- Check that the system is not in hold mode. If it is, slide the POWER/HOLD switch to clear hold mode.

The system does not function properly.

- Slide the POWER/HOLD switch to the right and hold it for at least three seconds until the POWER indicator turns off. After the system is completely turned off, turn it on again.
- If the PSP® system is brought directly from a cold location to a warm one, moisture may condense inside the system. Should this occur, the system may not operate properly. Turn off and unplug the system, and then leave it unused for several hours. If the system still does not operate properly, contact the appropriate PSP® customer service helpline. Details are found within the contact information section at <http://eu.playstation.com/support>.

The date and time are reset.

- If the system is left unused after the battery charge runs out, the system date and time settings may be reset. Follow the on-screen instructions to set the time and date.

The PSP® system is not recognised by the PC when connected using a USB cable.

- Check that your PSP® system is set to USB mode. If it is not, select (Settings) ➔ (USB Connection).
- Check that an operating system that supports USB mass storage class is installed in your PC in use.
- When using a USB hub or other devices, depending on the operating environment of the PC, the system may not be recognised by the PC. Try connecting the system directly to the PC using a USB cable.
- If (System Settings) ➔ [USB Charge] is set to [On], the device may not be recognised.

The connected USB device is not recognised by the PSP® system.

- Check that the USB connector is clean. Try wiping it with a soft, dry cloth.

You forgot your password.

- If you restore default settings under (System Settings) ➔ [Restore Default Settings], the system password will be reset to "0000". For details, refer to the online user's guide (⇒ page 3).

Note that if you restore default settings, settings you have adjusted for options other than the system password will also be cleared. Once cleared, these custom settings cannot be restored by the system.

The analog stick does not function properly.

- At a scene where the symptoms appear, move the analog stick in a circular motion to help you determine the optimum operating range.

GUARANTEE

GUARANTEE FOR CONSUMERS IN AUSTRALIA, NEW ZEALAND, and FIJI

Thank you for buying this Product. We hope you enjoy using it.

The term "Product" means your PlayStation® console and any official PlayStation peripherals supplied in the box with your PlayStation console.

Please note: the system software pre-installed in the Product or subsequently provided via updates or upgrade releases is licensed to you, not sold, and is for use only as part of the Product. The terms of such system software licence are at <http://www.scei.co.jp/psp-eula>.

This Guarantee is given to you, the first user of the Product by Sony Computer Entertainment Europe Limited ("SCEE") of 10 Great Marlborough Street, London, W1F 7LP, United Kingdom. It is personal to you and cannot be used by anyone else. This Guarantee is in addition to your statutory consumer rights (under applicable law) and does not affect them in any way.

Our Guarantee to you: SCEE guarantees that this Product is free from defects in materials and workmanship that result in Product failure during normal usage in accordance with the terms set out below and will, for a period of 1

(one) year from the date of original purchase (the "Guarantee Period"), repair or, at SCEE's option, replace any component part of this Product, free of charge, where it is faulty due to defective materials or workmanship. Replacement will be with a new or, at SCEE's option, refurbished component or console, which is guaranteed for the longer of 3 (three) months or the remainder of the original Guarantee Period. This Guarantee does not cover your data; any software or PlayStation games whether or not packaged or included with the Product; any PlayStation peripherals that are not manufactured by or for SCEE; or any PlayStation accessories.

IMPORTANT

1. If you need to claim under this Guarantee, please call your local Customer Service helpline shown in this manual for return instructions.
2. Where SCEE has put this Product on the market in Australia, New Zealand or Fiji, this Guarantee is valid in Australia, New Zealand, and Fiji provided:
 - a. the original sales receipt or invoice or other proof of purchase indicating the date of purchase and retailer's name, which has not been altered or defaced since the date of original purchase, is presented together with the Product within the Guarantee period; and

- b. the Guarantee seal and the serial number on the Product have not been damaged, altered, defaced or removed.
- 3. SCEE may elect at its option to repair or replace the Product.
- 4. Repair or replacement may involve installation of the latest software or firmware updates for the Product.
- 5. Products with Removable Hard Disk Drive ("HDD")
 - a. If the Product includes a removable HDD on purchase, when arranging for warranty service under this Guarantee, our Customer Service helpline will discuss with you whether you should leave that HDD Product or remove and retain the HDD prior to the return of the Product for warranty service.
 - b. If the Product is returned with the HDD for warranty service, repair or replacement of the Product will involve reformatting that HDD.
 - c. If the Product is returned without the HDD for warranty service, we will if possible give the repaired or replaced unit the same unique internal identification as the returned Product. If for any reason we are unable to rewrite the original Product ID and you wish to receive warranty service, you will need to reformat your HDD before you are able to use it with your repaired or replaced Product.
 - d. You understand and agree that reformatting of the HDD will result in loss of your stored data, files and software. To avoid loss of any software, data or files which you wish to retain, before submitting the Product for guarantee service you should, where possible, back these up and remove them from the HDD. Clearing your PlayStation®Network password will help protect any information you consider confidential.
- 6. To avoid damage to or loss or erasure of other removable data storage media, peripherals, accessories or non-original components, you must remove them before submitting the Product for Guarantee service.
- 7. You understand that this Guarantee does not cover stored data, files or software and you agree that SCEE is not liable to you for any loss or corruption of your data, files or software in connection with your exercise of this Guarantee.
- 8. You should back up your HDD regularly to prevent loss or alteration of data, files or software although some content cannot be backed up and must be reinstalled by the user.
- 9. You may not claim under this Guarantee when the Product is damaged as a result of:
 - a. commercial use, accident, fair wear and tear, negligence, abuse, or misuse (including, without limitation, failure to use this Product for its normal purpose and/or in accordance with instructions on proper use and maintenance, or installation or use in a manner inconsistent with applicable local technical or safety standards);

- b. use in conjunction with any unauthorised peripheral or component (including, without limitation, game enhancement devices, HDDs, adaptors and power supply devices);
 - c. any adaptation or adjustment to, or alteration of, the Product carried out for any reason, and whether properly carried out or not;
 - d. maintenance or repair or attempted maintenance or repair carried out other than by a SCEE-authorised service facility;
 - e. use of unauthorised software, virus infection, fire, flood or other natural calamity; or
 - f. operation or treatment of the Product inconsistent with normal personal or domestic use or operation outside the Product specifications.
10. You may not claim under this Guarantee where you are in material breach of your system software licence (see <http://www.scei.co.jp/psp-eula>).
11. To the extent permitted by applicable law, this Guarantee will be your sole and exclusive remedy in relation to defects in this Product and all other guarantees, warranties, terms and conditions, express or implied by statute or otherwise, in respect of this Product are excluded and neither SCEE nor any other Sony entity or its or their suppliers or authorised service facilities, will be liable for any special, incidental, indirect or consequential loss or damage including loss of data, howsoever arising.
12. SCEE does not warrant or guarantee any third party

products or services which may be offered in connection with the Product except to the extent stipulated above.

If this Product needs any repair which is not covered by this Guarantee, please call your local Customer Service helpline for advice. If your home country is not one of those listed, please contact your retailer.

Notice for Consumers in Australia and New Zealand:

In Australia, this Product comes with statutory guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation of any other reasonably foreseeable loss or damage. You are also entitled to have the Product repaired or replaced if the Product fails to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand, the New Zealand Consumer Guarantees Act 1993 provides certain statutory guarantees and other legal rights in relation to the quality and fitness for purpose. These statutory guarantees cannot be modified nor excluded by any contract, except in those circumstances contemplated by section 43(2) of the New Zealand Consumer Guarantees Act.

The above statutes will identify the party or parties against which you can exercise your statutory rights.

Our Guarantee is in addition to these statutory rights and does not affect them in any way.

Customer Service Numbers

AU

Australia **1300 365 911**

Calls charged at local rate

support@playstation.com.au

FJ

Fiji

support@playstation.com.au

NZ

New Zealand **09 415 2447**

National Rate.

general_enquiries@playstation.co.nz

Before disposing of or transferring the PSP® system

Before disposing of or giving your PSP® system to another person for any reason, delete all the data and restore the default settings on the system. This will help prevent unauthorised access to or use of your credit card or other personal information.

- 1 Select  (Settings) ➔  (System Settings)
➔ [Restore Default Settings] to go back to the settings at the time of purchase.**

- 2 Select  (Settings) ➔  (System Settings)
➔ [Format System Storage] to delete all the data saved in the system storage.**



Where you see either symbol on any of our electrical products, batteries or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment/batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste.
This symbol may be used on batteries in combination with additional chemical symbols. The chemical symbols for mercury (Hg) or lead (Pb) will appear if the battery contains more than 0.0005% mercury or more than 0.004% lead.

This product contains a battery which is permanently built-in for safety, performance or data integrity reasons. The battery should not need to be replaced during the lifetime of the product and should only be removed by skilled service personnel. To ensure the correct waste treatment of the battery, please dispose of this product as electrical waste.

Specifications

Design and specifications are subject to change without notice.

PSP® (PlayStation®Portable) system

LCD screen	4.3 inches / 10.9 cm (16:9) full-transparent type, TFT drive Approximately 16,770,000 colours displayed
Sound	Monaural speaker
Internal disc drive	Read-only Universal Media Disc drive
Interface	DC IN 5V connector Hi-Speed USB (USB 2.0 compliant) DC OUT connector Headset connector Memory Stick PRO Duo™ slot
Power source	AC Adaptor: DC 5.0 V Rechargeable Battery Pack: Lithium-Ion rechargeable Battery Pack
Maximum power consumption	Approx. 6 W (when charging)
External dimensions	Approx. 172.4 × 73.4 × 21.6 mm (width × height × depth) (excludes largest projection)

Weight	Approx. 223 g (including Battery Pack)	
Operating environment temperature	5°C - 35°C	
Compatible codecs	Universal Media Disc	Video: H.264/MPEG-4 AVC Main Profile Level 3 Music: H.264/MPEG-4 AVC Main Profile Level 3, Linear PCM, ATRAC3plus™
	Memory Stick™	For details, refer to the User's Guide (▶ page 3).

Universal Media Disc laser

Wave length	655 - 665 nm
Power	Max. 0.28 mW
Type	Semiconductor, continuous

AC Adaptor*

Input	AC 100-240 V, 50/60 Hz
Output	DC 5 V, Max. 1500 mA
External dimensions	Approx. 46 × 22 × 61 mm (width × height × depth) (excludes largest projection) (PSP-E1002) Approx. 51 × 61 × 54 mm (width × height × depth) (excludes largest projection) (PSP-E1003)
Weight	Approx. 57g (PSP-E1002) Approx. 66g (PSP-E1003)

* The PSP- E1003 model comes with a combined AC Adaptor and AC Power Cord.

Compatible media

The media types listed below can be used on the PSP® system. Throughout this manual, the term "Memory Stick Duo™" is used to refer to all types of Memory Stick™ media in the table below.

Type	Logo
Memory Stick Duo™ (not MagicGate™-compatible)	MEMORY STICK DUO™
MagicGate™ Memory Stick Duo™ * ¹	MEMORY STICK DUO™ MAGICGATE™
Memory Stick Duo™ (MagicGate™ compatible) * ¹ * ²	MEMORY STICK DUO™ MAGICGATE™
Memory Stick PRO Duo™ * ¹ * ²	MEMORY STICK PRO DUO™ MAGICGATE™
Memory Stick PRO-HG Duo™ * ¹ * ²	MEMORY STICK PRO-HG DUO™ MAGICGATE™
Memory Stick Micro™ (M2™) * ¹ * ² * ³	M2™

*¹ Compatible with MagicGate™

*² Compatible with high-speed data transfer over a parallel interface.

*³ To use Memory Stick Micro™ media, you must first insert it into an M2 Duo-size adaptor. If the Memory Stick Micro™ is inserted directly into the system, it may not be able to be ejected.

Hints

- The standard-size Memory Stick™ cannot be used with the system.
- Performance of all Memory Stick™ media is not guaranteed.
- If a Memory Stick Duo™ is formatted in a device other than the PSP® system, such as a PC, it is possible that the system will not recognise it. If this happens, go to  (System Settings) ➔ "Format Memory Stick™" and re-format the Memory Stick Duo™.

Universal Media Disc

Universal Media Disc contain a region code that is assigned to each sales region. This system can play Universal Media Disc marked with either region code "ALL", "4" (PSP- E1002 only) or "2" (PSP- E1003 only).



4

(PSP- E1002 only)




2

(PSP- E1003 only)

Memory Stick Duo™

For best results, follow these guidelines:

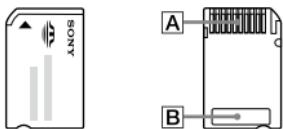

- Do not touch the connector area (**A**) with your hands or with metal objects.
- Do not press hard when writing on the memo area (**B**).
- Do not use or store a Memory Stick Duo™ in the following:
 - Places subject to high temperatures, such as in a hot vehicle
 - Locations exposed to direct sunlight
 - Locations that are very humid or conducive to corrosion
- When using Memory Stick Duo™ media without an erasure prevention switch, take care not to overwrite or delete data by accident. If your Memory Stick Duo™ media has an erasure prevention switch, you can prevent data from being saved, edited, or deleted by setting the switch in the LOCK position.

Recorded data

Do not use the Memory Stick Duo™ in the following ways, as doing so may result in data loss or corruption:

- Removing the Memory Stick Duo™ or turning off the system while it is loading or saving data or being formatted.
- Using it in a location that is exposed to static electricity or electrical interference.

If, for any reason, software or data loss or corruption occurs, it is usually not possible to recover the software or data. Sony Computer Entertainment Inc. and its subsidiaries and affiliates accept no liability for damages, costs or expenses arising from software, data loss or corruption.

File size limitation

The specification of the file system used on Memory Stick™ media limits the size of files that can be recorded or played to less than 4 GB per file.

MagicGate™

MAGIC GATE™ is a term of copyright-protection technology developed by Sony Corporation.

Copyright and trademarks

"", "PlayStation", "and "" are registered trademarks of Sony Computer Entertainment Inc. Also, "PS3" is a trademark of the same company.

"XMB" and "xross media bar" are trademarks of Sony Corporation and Sony Computer Entertainment Inc.

"SONY" and "" are registered trademarks of Sony Corporation. Also, "Memory Stick", "Memory Stick Duo", "Memory Stick Micro", "M2", "" and "MagicGate" are trademarks of the same company.



U.S. and foreign patents licenced from Dolby Laboratories.

ATOK is a registered trademark of JUSTSYSTEM CORP. in Japan and other countries



Software developed by the NetBSD Foundation, Inc. and its contributors is used for the communication functions of this product. For more information, see
<http://www.scei.co.jp/psp-license/pspnet.txt>

This product includes RSA BSAFE® Cryptographic software from RSA Security Inc.

RSA, BSAFE are either registered trademarks or trademarks of RSA Security Inc. in the United States and/or other countries. RSA Security Inc. All rights reserved.

This product adopts S3TC texture compression technology under licence from S3 Graphics, Co., Ltd.

MPEG Layer-3 audio coding technology and patents licenced from Fraunhofer IIS and Thomson.

This software is based in part on the work of the Independent JPEG Group.

Copyright © 1988-1997 Sam Leffler
Copyright © 1991-1997 Silicon Graphics, Inc.

Permission to use, copy, modify, distribute, and sell this software and its documentation for any purpose is hereby granted without fee, provided that (i) the above copyright notices and this permission notice appear in all copies of the software and related documentation, and (ii) the names of Sam Leffler and Silicon Graphics may not be used in any advertising or publicity relating to the software without the specific, prior written permission of Sam Leffler and Silicon Graphics.

THE SOFTWARE IS PROVIDED "AS-IS" AND WITHOUT WARRANTY OF ANY KIND, EXPRESS, IMPLIED OR OTHERWISE, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

IN NO EVENT SHALL SAM LEFFLER OR SILICON GRAPHICS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER OR NOT ADVISED OF THE POSSIBILITY OF DAMAGE, AND ON ANY THEORY OF LIABILITY, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

The PSP® system's RSS Channel feature uses RSS (Really Simple Syndication) 2.0 technology. For details on RSS 2.0, visit <http://blogs.law.harvard.edu/tech/rss>

All other trademarks are the properties of their respective owners.