

SONY®



PlayStation®Move motion controller

Instruction Manual

CECH-ZCM1E

7028429

Before use

- Carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference.
- Always update your system to the latest version of the system software.

Precautions

Safety

- Avoid prolonged use of this product. Take a 15-minute break during each hour of play.
- Stop using this product immediately if you begin to feel tired or if you experience discomfort or pain in your hands or arms during use. If the condition persists, consult a doctor.
- If you experience any of the following health problems, discontinue use of the system immediately. If symptoms persist, consult a doctor.
 - Dizziness, nausea, fatigue or symptoms similar to motion sickness.
 - Discomfort or pain in a part of the body, such as eyes, ears, hands or arms.
- The product is intended for use with the hands only.
- The vibration function of this product can aggravate injuries. Do not use the vibration function if you have any ailment or injury to the bones, joints, or muscles of your hands or arms. You can turn on or turn off the vibration function from  (Settings) on the function screen.
- Avoid holding the product closer than 20 cm from the face or eyes.

- Keep the product out of the reach of small children. Young children might damage the product causing it to malfunction, swallow small parts, wrap the cables around themselves or accidentally injure themselves or others.

Use and handling

- When using the controller, be aware of the following points.

- Before use, make sure that there is plenty of space around you.
 - Do not use with the USB cable connected.
 - Attach the supplied strap to the controller and wear the strap on your wrist to help prevent losing your grip on the controller.
 - Firmly grip the controller to prevent it from slipping out of your grasp and causing damage or injury. Furthermore, avoid swinging the controller with excessive force.
- 
- Do not squeeze the sphere, hold it tightly or place objects on top of it, as doing so may cause it to become misshapen.
 - Do not allow liquid or small particles to get into the product.
 - Do not touch the product with wet hands.
 - Do not throw or drop the product or subject it to strong physical shock.
 - Do not put heavy objects on the product.
 - Do not touch the inside of the USB connector or insert foreign objects.
 - Never disassemble or modify the product.

Exterior protection

Follow the instructions below to help prevent the product exterior from deteriorating or becoming discoloured.


- Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
- Use a soft, dry cloth to clean the product. Do not use solvents or other chemicals. Do not wipe with a chemically-treated cleaning cloth.

Storage conditions


- Do not expose the product to high temperatures, high humidity or direct sunlight.
- Do not expose the product to dust, smoke or steam.

Part names


Front view

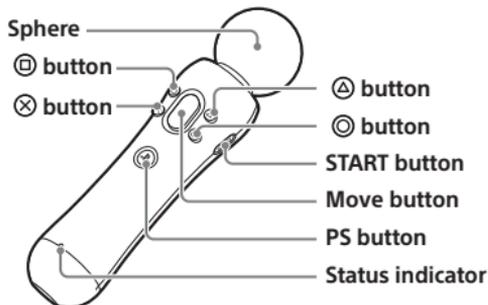

Rear view

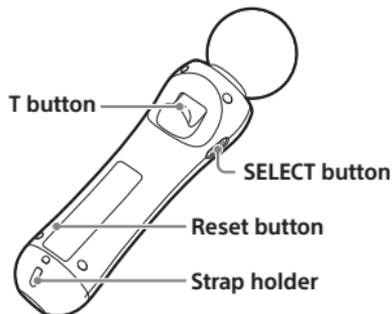


Bottom view

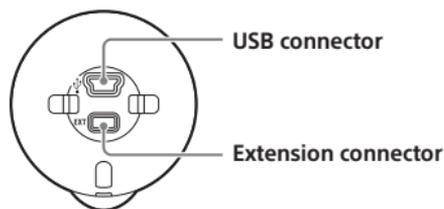

Getting started

Attaching the supplied strap

Follow the diagram to attach the strap.

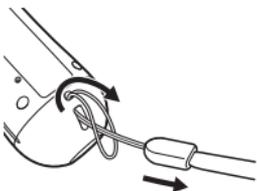

Pairing your controller

Before using your controller, you must first pair it with your PS4™ system. You only need to do this the first time you use the motion controller.

- 1 Turn on your PlayStation®4 system.**
- 2 Connect your controller to the PS4™ system with a USB cable.**
Use the USB cable supplied with the controller.
- 3 Press the  (PS) button on your controller.**
The controller is paired with the PS4™ system.

Hints

- Follow the same steps to pair the controller with a PlayStation®3 system.
- When using the controller with a PS3™ system, use system software version 3.70 or later.
- You can use up to four controllers at one time. To use two or more controllers, pair each controller separately.
- When a paired controller is used with another system, the pairing with the original system will be cleared. Pair the controller with the system again if it has been used with another system.

Connecting/setting up a camera

Connect and set up the PlayStation®Camera (sold separately). For details, refer to the instruction manual for the camera.

Hint


When using the controller with a PS3™ system, connect and set up the PlayStation®Eye camera (sold separately). For details, refer to the instruction manual for the PlayStation®Eye camera.

Using your controller

Notice

Always disconnect the USB cable before use.

- 1 Turn on your PS4™ system.
- 2 Press the  (PS) button on your motion controller.
The controller is automatically assigned to a user.
- 3 Wear the strap on your wrist.

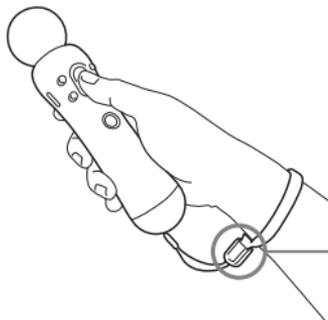

Use the strap lock to tighten the strap.

Hints

- Follow the same steps to use the controller with a PS3™ system.
- You can press and hold the T button to use the motion controller to navigate menus. Press the Move button or  button to select an item.

- On a PS3™ system, you can check the assigned controller number on the screen by pressing and holding the  (PS) button.
- To quit a game, press and hold the  (PS) button, and then follow the on-screen instructions.

Adjusting the controller settings

Select  (Settings) > [Devices] > [Controllers] from the function area.

Enable Vibration

Set the vibration function on or off. Clearing the checkbox disables the function, and the controller will not vibrate even if you enable vibration in the game settings.

Hints

- On a PS3™ system, you can adjust the controller settings by selecting  (Settings) >  (Accessory Settings).
- You can also adjust some settings while playing a game. Press and hold the  (PS) button, and then follow the on-screen instructions.

Charging your controller

Charge your controller by connecting it to a PS4™ system or a PS3™ system that is turned on, using the USB cable supplied with the controller. The status indicator of the motion controller blinks slowly, and charging begins. The status indicator stops blinking when charging is complete.

Hints

- You can also charge your controller while the PS4™ system is in rest mode. From the PS4™ system's function area, you must select an option other than [Off] in  (Settings) > [Power Save Settings] > [Set Features Available in Rest Mode] > [Supply Power to USB Ports].
- You can check the battery charge level on the screen by pressing and holding the  (PS) button.

Battery

Caution – using the built-in battery:

- This product contains a lithium-ion rechargeable battery.
- Before using this product, read all instructions for handling and charging the battery and follow them carefully.
- Take extra care when handling the battery. Misuse can cause fire and burns.
- Never attempt to open, crush, heat or set fire to the battery.
- Do not leave the battery charging for a prolonged period of time when the product is not in use.
- Always dispose of used batteries in accordance with local laws or requirements.
- Do not handle the damaged or leaking battery.


- If the internal battery fluid leaks, stop using the product immediately and contact technical support for assistance. If the fluid gets on to your clothes, skin or into your eyes, immediately rinse the affected area with clean water and consult your doctor. The battery fluid can cause blindness.

Battery life and duration

- The battery has a limited lifespan. Battery charge duration gradually decreases with repeated usage and age. Battery life also varies depending on the storage method, usage state, environment and other factors.
- Charge in an environment where the temperature range is between 10 °C - 30 °C. Charging may not be as effective when performed in other environments.
- Battery duration may vary depending on the usage condition and environmental factors.
- If you do not plan to use the motion controller for an extended period of time, it is recommended that you fully charge it at least once a year to help maintain battery functionality.

Resetting your controller

If the motion controller responds abnormally or does not work as intended, try resetting it by pressing the reset button on the back of the controller with a fine-tipped object such as a pen.

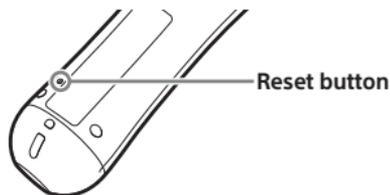

Specifications

Power consumption	DC 5 V, 800 mA
Battery type	Built-in, rechargeable Lithium-ion battery
Battery voltage	DC 3.6 V
Battery capacity	1380 mAh
Operating temperature	5°C – 35°C
External dimensions (excluding maximum projecting part)	Approx. 200 mm × 46 mm (height × diameter)
Mass	Approx. 145 g
Country of production	China

Design and specifications are subject to change without notice.

GUARANTEE

This product is covered for 12 months from date of purchase by the manufacturer's guarantee. Please refer to the guarantee supplied in the PS4™ package for full details.

This product has been manufactured by or on behalf of Sony Interactive Entertainment Inc., 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan.

Imported into Europe and Distributed by Sony Interactive Entertainment Europe Ltd, 10 Great Marlborough Street, London, W1F 7LP, United Kingdom.

The Authorised Representative for issuing and holding Declarations of Conformity is Sony Belgium, bijkantoor van Sony Europe Limited, Da Vincilaan 7-D1, 1935 Zaventem, Belgium.

For customers in Europe and Turkey.

R&TTE Directive "Informal DoC" statement

Hereby, Sony Interactive Entertainment Inc., declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For details, please access the following URL:
<http://www.compliance.sony.de/>



Where you see either symbol on any of our electrical products, batteries or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe and Turkey. To ensure correct waste treatment, please dispose of them via an authorised collection facility, in accordance with any applicable laws or requirements. Waste electrical products and batteries may also be disposed of free of charge via retailers when buying a new products of the same type. Furthermore, within EU countries larger retailers may accept small waste electronic products free of charge. Please ask your local retailer if this service is available for the products you wish to dispose of. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste.

This symbol may be used on batteries in combination with additional chemical symbols. The chemical symbols for mercury (Hg) or lead (Pb) will appear if the battery contains more than 0.0005% mercury or more than 0.004% lead.

This product contains a battery which is permanently built-in for safety, performance or data integrity reasons. The battery should not need to be replaced during the lifetime of the product and should only be removed by skilled service personnel. To ensure the correct waste treatment of the battery, please dispose of this product as electrical waste.

"PS", "PlayStation", "PS4" and "△○×□" are registered trademarks or trademarks of Sony Interactive Entertainment Inc.

"SONY" and "Sony Interactive Entertainment" are registered trademarks or trademarks of Sony Corporation.



Sony
Interactive
Entertainment

eu.playstation.com/ps4

