

SONY®



PS VITA™

PlayStation®Vita

Memory card Instruction Manual

PCH-Z321/PCH-Z161/PCH-Z081/PCH-Z041

Compatible hardware: PlayStation®Vita

Warning

 Keep out of the reach of small children to help prevent accidental swallowing.

Precautions

- Do not touch the connector area with your hands or with metal objects.
- Do not bend or drop the product, or otherwise expose it to strong physical impact.
- Never disassemble or modify the product.
- Do not allow the product to come into contact with liquids.
- Do not expose the product to high temperatures, high humidity or direct sunlight.

Use and handling

- This card stores applications downloaded from PlayStation®Store, saved data from games, and other content, including your photos and music.
- A portion of the memory card capacity is reserved for system files. As a result, the space available for actual use is less than the capacity stated on this package.
- Before you insert or remove a memory card, check that the power is off. This helps prevent data corruption or loss.

If, for any reason, software or data loss or corruption occurs, it is usually not possible to recover the software or data. It is recommended that you regularly back up software and data. Sony Computer Entertainment Inc. and its subsidiaries and affiliates will not be held liable for any damages or injury in the case of software or data loss or corruption.

Specifications

Operating temperature 5°C–35°C (41°F – 95°F) (non-condensing)

External dimensions Approx. 12.5 × 15 × 1.6 mm
(height × width × thickness)

Mass Approx. 0.6 g

Design and specifications are subject to change without notice.

GUARANTEE

This product is covered for 12 months from date of purchase by the manufacturer's guarantee. Please refer to the guarantee supplied in the PS Vita package for full details.

The manufacturer of this product is Sony Computer Entertainment Inc., 1-7-1 Konan, Minato-ku, Tokyo 108-0075 Japan.

The Authorised Representative for EMC and product safety in Europe is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany.

Distributed in Europe by Sony Computer Entertainment Europe Ltd, 10 Great Marlborough Street, London, W1F 7LP, United Kingdom.

This product may fall within the scope of national export control legislation. You must comply fully with the requirements of such legislation and of all other applicable laws of any jurisdiction in relation to this product.



Where you see either symbol on any of our electrical products, batteries or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment/batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste.

This symbol may be used on batteries in combination with additional chemical symbols. The chemical symbols for mercury (Hg) or lead (Pb) will appear if the battery contains more than 0.0005% mercury or more than 0.004% lead.

This product contains a battery which is permanently built-in for safety, performance or data integrity reasons. The battery should not need to be replaced during the lifetime of the product and should only be removed by skilled service personnel. To ensure the correct waste treatment of the battery, please dispose of this product as electrical waste.

“PS” and “PlayStation” are registered trademarks of Sony Computer Entertainment Inc. “PS VITA” is a trademark of the same company.

“SONY” and “” are registered trademarks of Sony Corporation.



eu.playstation.com/psvita

