

SONY®



DUALSHOCK®4 USB Wireless Adaptor

Instruction Manual

Before use

Carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference.

Precautions

Safety

- Keep the product out of the reach of small children. Young children might damage the product causing it to malfunction, swallow small parts or accidentally injure themselves or others.

Use and handling

- Do not let any other metal items come in contact with the product's USB connector.
- Do not throw or drop the product or subject it to strong physical shock.
- Do not place any objects on top of the product. Do not stand on the product.
- Do not place the product on surfaces that are unstable, tilted or subject to vibration.
- Do not allow liquid or small particles to get into the product.
- Do not touch the product with wet hands.
- Do not touch the inside of the USB connector or insert foreign objects.
- Never disassemble or modify the product.

Exterior protection

Follow the instructions below to help prevent the product exterior from deteriorating or becoming discoloured.

- Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
- Use a soft, dry cloth to clean the product. Do not use solvents or other chemicals. Do not wipe with a chemically-treated cleaning cloth.

Storage conditions


- Do not expose the product to high temperatures, high humidity or direct sunlight.
- Do not leave the product in a car with the windows closed, particularly in hot weather.
- Do not expose the product to dust, smoke or steam.

Using the wireless adaptor for the first time

When you connect the wireless adaptor to a Windows® PC or Mac, you can use a DUALSHOCK®4 wireless controller to control compatible applications. Details on compatible applications can be found at playstation.com/ds4-adaptor.

You must pair the controller to the wireless adaptor when using it for the first time.

1 Make sure the wireless controller is off.


If the light bar is on, press the  (PS) button until it turns off. Disconnect the USB cable if it is connected to the controller.

2 Insert the wireless adaptor into the USB port on your Windows® PC or Mac device.

The wireless adaptor's status indicator flashes slowly.

3 Push the wireless adaptor in the direction of the arrow for at least 3 seconds.

The status indicator flashes rapidly while the adaptor is in pairing mode.

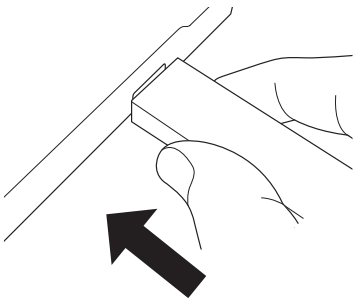

4 Press and hold both the **SHARE** button and **(PS)** button on the controller for at least 3 seconds.

The controller's light bar flashes while the controller is in pairing mode. When pairing is complete, both the wireless adaptor's status indicator and the controller's light bar turn a solid colour.

Hints

- Only one controller can be paired with the wireless adaptor.
- The wireless adaptor cannot be used to connect a DUALSHOCK®4 wireless controller to a PlayStation®4 system, PlayStation®Vita system or PlayStation®TV system.

Using a paired controller

Follow the steps below to use a paired controller with your device.

1 Insert the wireless adaptor into the USB port of your device.

The wireless adaptor's status indicator flashes slowly.

2 Press the **(PS)** button on the controller.

When the devices are connected, both the wireless adaptor's status indicator and the controller's light bar turn a solid colour.

Hints

If the controller cannot connect to the wireless adaptor, try the following:

- Turn the controller off and try to pair it again with the wireless adaptor (the adaptor might already be paired with another controller).
- Move the controller closer to the adaptor. Make sure there are no physical obstacles that might be blocking communication between them.
- Move nearby Wi-Fi devices such as smartphones or tablets away from the adaptor and controller, or turn them off.

Status indicator

Light status	Adaptor status
Solid	In use
Flashing rapidly	Pairing mode
Flashing slowly	Waiting to connect

When the adaptor is not in use

Remove the wireless adaptor from your device.

Specifications

Input Power Rating	DC 5 V, 100 mA
External dimensions	Approx. 18 × 9 × 75 mm (width × height × depth)
Mass	Approx. 10 g
Operating temperature	5 °C - 35 °C
Country of production	China

Design and specifications are subject to change without notice.

GUARANTEE

This product is covered for 12 months from date of purchase by the manufacturer's guarantee. Please refer to the guarantee supplied in the PS4™ package for full details.

This product has been manufactured by or on behalf of Sony Interactive Entertainment Inc., 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan.
Imported into Europe and Distributed by Sony Interactive Entertainment Europe Ltd, 10 Great Marlborough Street, London, W1F 7LP, United Kingdom.
The Authorised Representative for issuing and holding Declarations of Conformity is Sony Belgium, bijkantoor van Sony Europe Limited, Da Vincilaan 7-D1, 1935 Zaventem, Belgium.

For customers in Europe and Turkey.


R&TTE Directive "Informal DoC" statement

Hereby, Sony Interactive Entertainment Inc., declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. For details, please access the following URL: <http://www.compliance.sony.de/>



Where you see this symbol on any of our electrical products or packaging, it indicates that the relevant electrical product should not be disposed of as general household waste in Europe and Turkey. To ensure correct waste treatment, please dispose of them via an authorised collection facility, in accordance with any applicable laws or requirements. Waste electrical products may also be disposed of free of charge via retailers when buying a new product of the same type. Furthermore, within EU countries larger retailers may accept small waste electronic products free of charge. Please ask your local retailer if this service is available for the products you wish to dispose of. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste.

"PS", "PlayStation" and "DUALSHOCK" are registered trademarks or trademarks of Sony Interactive Entertainment Inc.

"SONY" and " Sony Corporation" are registered trademarks or trademarks of Sony Corporation.

Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

Mac is a trademark of Apple Inc., registered in the U.S. and other countries.



Sony
Interactive
Entertainment

