

SONY®



## PlayStation®Camera

Instruction Manual

## Before use

- Carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference.
- Always update your system to the latest version of the system software.

## Precautions

### Safety

- Avoid prolonged use of this product. Take a 15-minute break during each hour of play.
- Keep the product out of the reach of small children. Young children might damage the product causing it to malfunction, swallow small parts, wrap the cables around themselves or accidentally injure themselves or others.

### Use and handling

- Do not place the product on surfaces that are unstable, tilted or subject to vibration.
- Do not allow the product to come into contact with liquids.
- Do not touch the product with wet hands.
- Do not throw or drop this product or subject it to strong physical shock.
- Do not put heavy objects on the product.
- Do not touch the inside of the connector or insert foreign objects.
- Do not let any other metal items come in contact with the connectors.
- Never disassemble or modify the product.

## Exterior protection

Follow the instructions below to help prevent the product exterior from deteriorating or becoming discoloured.

 
- Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
- Use a soft, dry cloth to clean the product. Do not use solvents or other chemicals. Do not wipe with a chemically-treated cleaning cloth.

## Storage conditions


- Do not expose this product to high temperatures, high humidity or direct sunlight.
- Do not expose the product to dust, smoke or steam.

## Attaching the stand

- 1** Insert the camera into the stand.

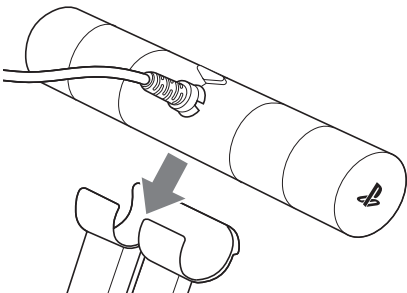

 - 2** Align the grooves at the base of the cable with the stand, and then press the base of the cable into stand.


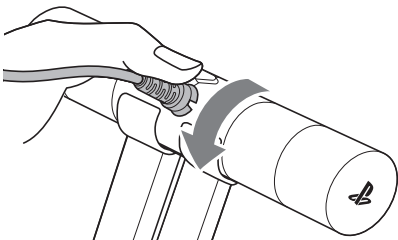


## Connecting and installing

Connect the camera to your PlayStation®4 system's AUX port, and then place the camera on top (centre) or in front (centre) of your TV.



### Placing the camera on top of a TV

  To prevent the camera from falling, secure it on top of the TV by bending the stand into position.

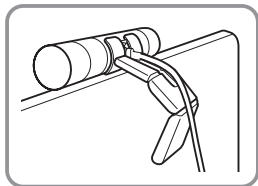


### Placing the camera in front of a TV

  You can also place the camera in front of your TV by bending the stand into position.

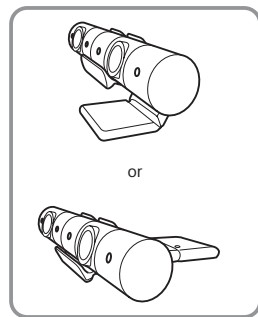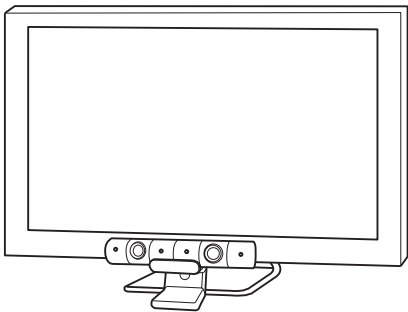

## Hints

 - If the camera is not recognised by your PS4™ system, disconnect the camera cable, and then reconnect it. If the camera is still not recognised, turn off the PS4™ system, and then turn it on again.
- If the dual lenses of the camera become dirty, wipe them with a soft cloth.
- Adjust the angle by rotating the camera. Note that if you rotate the camera too much, it may detach from the stand. Do not let any other metal items come in contact with the connectors.

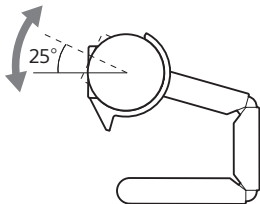

## Specifications

<b>Input Power Rating</b>	3.5 V $\bar{=}$ 500 mA
<b>External dimensions (excluding stand)</b>	Approx. 159 × 28 × 28 mm (width × height × depth)
<b>Mass (excluding stand)</b>	Approx. 152 g
<b>Video pixels (maximum)</b>	1280 × 800 pixels × 2
<b>Camera</b>	Stereo camera
<b>Camera range</b>	30 cm ~ ∞/85 °
<b>Microphones</b>	4-channel microphone array
<b>Cable length</b>	Approx. 2 m
<b>Operating temperature</b>	5 °C to 35 °C
<b>Country of production</b>	China

Design and specifications are subject to change without notice.

## GUARANTEE

This product is covered for 12 months from date of purchase by the manufacturer's guarantee. Please refer to the guarantee supplied in the PS4™ package for full details.

---

This product has been manufactured by or on behalf of Sony Interactive Entertainment Inc., 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan.

---



"PS", "PlayStation" and "PS4" are registered trademarks or trademarks of Sony Interactive Entertainment Inc.

"SONY" and " Sony Corporation" are registered trademarks or trademarks of Sony Corporation.



Sony  
Interactive  
Entertainment

