

DUALSHOCK®4 Wireless Controller Instruction Manual

Precautions

Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference.

- Do not use the vibration function if you have any ailment or injury to the bones, joints or muscles of your hands or arms.
- You can turn on or turn off the vibration function from  (Settings) on the function screen.
- Avoid prolonged use of the PS4™ system and Wireless Controller.
- Stop using this product immediately if you begin to feel tired or if you experience discomfort or pain in your hands or arms during use. If the condition persists, consult a doctor.
- Permanent hearing loss may occur if the headset or headphones are used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing or any discomfort in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing:
 - Limit the amount of time you use the headset or headphones at high volume.
 - Avoid raising the volume to block out noisy surroundings.
 - Lower the volume if you can't hear people speaking near you.
- Avoid looking into the light bar of the controller when it is flashing. Stop using the controller immediately if you experience any discomfort or pain in any body parts.
- Do not handle damaged or leaking lithium-ion batteries. If the internal battery fluid leaks, stop using the product immediately and contact technical support for assistance. If the fluid gets on to your clothes, skin or into your eyes, immediately rinse the affected area with clean water and consult your doctor. The battery fluid can cause blindness.
- Never disassemble or modify the product.
- Do not expose the product to high temperatures, high humidity or direct sunlight.
- Do not allow the product to come into contact with liquids.
- Do not put heavy objects on the product.
- Do not throw or drop the product, or otherwise expose it to strong physical impact.
- Take care when using the Wireless Controller's motion sensor function.
 - Before using the motion sensor function, make sure you have enough space to move around.
 - Firmly grip the Wireless Controller to prevent it from slipping out of your grasp and causing damage or injury.
 - When using the Wireless Controller with a USB cable, ensure that the cable cannot hit a person or any object, and do not pull the cable out of the PS4™ system whilst playing.


Exterior protection

Follow the instructions below to help prevent the product exterior from deteriorating or becoming discoloured.

- Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
- Use a soft, dry cloth to clean the product. Do not use solvents or other chemicals. Do not wipe with a chemically-treated cleaning cloth.

Registering (pairing) the controller

The first time you use the controller or when you want to use the controller on another PlayStation-4 system, you must perform device registration (pairing). Turn on the PS4™ system and connect the controller with the USB cable to complete device registration.

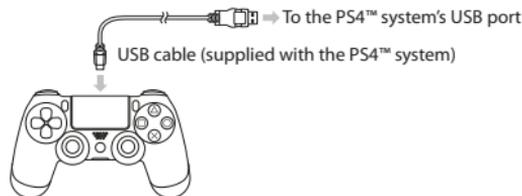

For details on using the controller, refer to the user's guide of the PS4™ system (eu.playstation.com/help/ps4/manuals/).

Battery life

- The battery has a limited lifespan. Battery duration will gradually decrease with repeated usage and age. Battery life also varies depending on the storage method, usage state, environment and other factors.
- Charge in an environment where the temperature range is between 10°C – 30°C. Charging may not be as effective when performed in other environments.

Storage

When the Wireless Controller is not used for an extended period of time, it is recommended that you fully charge it at least once a year in order to maintain its functionality.

Specifications

Input power rating	DC 5 V, 800 mA
Voltage	DC 3.65 V
Battery capacity	1,000 mAh
Battery type	Built-in rechargeable Lithium-Ion battery
Operating temperature	5°C – 35°C
Mass	Approx. 210 g

Design and specifications are subject to change without notice.

Supplied items

DUALSHOCK®4 Wireless Controller (1), Instruction manual (this document) (1), A USB cable is not included. To connect or charge the controller, use the USB cable supplied with the PS4™ system.

GUARANTEE

This product is covered for 12 months from date of purchase by the manufacturer's guarantee. Please refer to the guarantee supplied in the PS4™ package for full details.

This product has been manufactured by or on behalf of Sony Computer Entertainment Inc., 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan.

Imported into Europe and Distributed by Sony Computer Entertainment Europe Ltd, 10 Great Marlborough Street, London, W1F 7LP, United Kingdom.

The Authorised Representative for issuing and holding Declarations of Conformity is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany.

Made in China

“PS”、“PlayStation”、“DUALSHOCK” and “△○×□” are registered trademarks of Sony Computer Entertainment Inc. “PS4” is a trademark of the same company.

“SONY” and “SONY” are registered trademarks of Sony Corporation.



eu.playstation.com/ps4

