



## Custom faceplate (HDD bay cover)

**SLEH-00327**

7027128

Compatible with the PlayStation®4 system

Before using this product, carefully read this manual and retain the instructions for future reference.

Do not discard the original HDD bay cover after removal; keep it in a safe place. The PS4™ system must be returned with the original HDD bay cover in place when arranging for warranty service.

### Precautions

#### Safety


- For safety reasons, be sure to turn off and unplug the PS4™ system before attempting to remove the HDD bay cover.
- The inside of the system is hot directly after use. Allow time for the system to cool down before removing the HDD bay cover.
- Be careful not to pinch your fingers between the HDD bay cover and the PS4™ system, or otherwise injure your fingers or hands on the corners of the HDD bay cover or other parts.
- Be sure to reattach the HDD bay cover before turning the PS4™ system on. If the cover is not in place, heat may build up inside the system.
- Keep this product out of the reach of small children.

#### Storage

- Do not expose the product to high temperatures, high humidity or direct sunlight.
- Do not expose the product to dust, smoke or steam.

### Removing and replacing the HDD bay cover

- 1 On the PS4™ system's function screen, select [Power] > [Power Options] > [Turn Off PS4]. The power indicator will turn off.
- 2 Remove the AC power cord's plug from the electrical outlet, then unplug it from the PS4™ system and disconnect all other cables from the system.
- 3 Apply gentle downward pressure to the area of the HDD bay cover that meets the power indicator, and slide the HDD bay cover in the direction of the arrow shown in the diagram to unclip it.

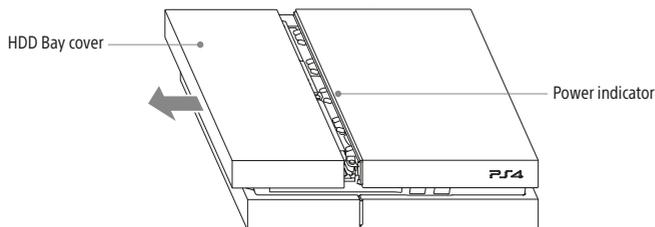

- 4 Once the HDD bay cover is unclipped, it will stop sliding once opened by about 2cm. To avoid possible damage to the clips, gently release the HDD bay cover's front edge from the front of the PS4™ system and continue to lift it upwards and away from the system.
- 5 Reattach the HDD bay cover by repositioning it on the PS4™ system and sliding it in the opposite direction to the arrow shown in the diagram until it clicks into place.
- 6 Once the HDD bay cover is in place, you can reconnect the AC power cord and other cables, then turn the PS4™ system on.

## Specifications

**External dimensions (width × height × depth)** Approx. 287.5 x 108.5 x 22.0mm

**Mass** Approx. 82.5g

Design and specifications are subject to change without notice.

## Limitations of Liability

Other than as expressly set forth by Sony Computer Entertainment Europe Limited ("SCEE") or any other Sony entity, or their suppliers or authorised service facilities, except to the extent prohibited by applicable laws, SCEE or any other Sony entity, or their suppliers or authorised service facilities, shall not be liable for any damages, including special, incidental or consequential damages, or fees arising out of the use or inability to use this product.

---

This product is manufactured for Sony Computer Entertainment Europe Ltd, 10 Great Marlborough Street, London, W1F 7LP, United Kingdom.

Imported into Europe and Distributed by Sony Computer Entertainment Europe Ltd, 10 Great Marlborough Street, London, W1F 7LP, United Kingdom.

---

Made in China.

"PS" and "PlayStation" are registered trademarks of Sony Computer Entertainment Inc.

"PS4" is a trademark of the same company.

"SONY" and "PS" are registered trademarks of Sony Corporation.

