

SONY®



Network Adaptor (Ethernet) (for PlayStation®2)

Instruction Manual

Thank you for purchasing the Network Adaptor (Ethernet) (for PlayStation®2). You can use this product with PlayStation®2 format software specified as compatible with the Network Adaptor (for PlayStation®2). Before using this product, carefully read this instruction manual and retain it for future reference.

The Network Adaptor is exclusively for use with the PlayStation®2 computer entertainment system. This product is only intended for networks in the country in which it is sold.

PlayStation®2

SCPH-10350EE

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To prevent fire or shock hazard, do not place a container filled with liquids on top of the console.

**To avoid electrical shock, do not disassemble.
Refer servicing to qualified personnel only.**

This equipment has been tested and found to comply with the limits set out in the EMC Directive using a connection cable shorter than 3 metres (9.8 feet).

Important Notice

Before using this product with your PlayStation®2 console, please review the serial numbers listed below. Should your serial number (found on the console rear) match any of the numbers on the list, please contact the appropriate PlayStation® customer service helpline which can be found within every PlayStation® and PlayStation®2 format software manual.

Serial numbers		
4108937 – 4110112	4174457 – 4174612	4198514 – 4199917
4110545 – 4111612	4178801 – 4180312	4200014 – 4201417
4112045 – 4113112	4180421 – 4180612	4201514 – 4202917
4113221 – 4116016	4180829 – 4182112	4203014 – 4204417
4116101 – 4116112	4182545 – 4184056	4204514 – 4205377
4116437 – 4119112	4184165 – 4184932	4206014 – 4206769
4142813 – 4143568	4185113 – 4185544	4206878 – 4206985
4143677 – 4144000	4185653 – 4185976	4207094 – 4207417
4145921 – 4147216	4186613 – 4189096	4207514 – 4208917
4149137 – 4150216	4189205 – 4189528	4209014 – 4210417
4150949 – 4161112	4189613 – 4190692	4210514 – 4211917
4168421 – 4168612	4191113 – 4192192	4212014 – 4213309
4170029 – 4170112	4192613 – 4195444	4213514 – 4214917
4171637 – 4172824	4195514 – 4196917	4216514 – 4216621
	4197014 – 4198417	

AVERTISSEMENT

Afin d'éviter tout risque d'incendie et d'électrocution, n'exposez pas l'unité à la pluie ou à l'humidité.

Afin d'éviter tout risque d'incendie ou d'électrocution, ne posez pas de récipients contenant du liquide sur la console.

Pour éviter tout risque d'électrocution, ne démontez pas l'unité. Confiez l'entretien uniquement à un technicien qualifié.

Cet appareil a été testé et il a été déterminé qu'il se conforme aux normes stipulées par la directive CEM lorsqu'il est utilisé avec un câble de connexion d'une longueur inférieure à 3 mètres (9,8 pieds).

Notice importante

Avant d'utiliser ce produit avec votre console PlayStation®2, veuillez consulter la liste des numéros de série ci-dessous. Si votre numéro de série (qui se trouve inscrit à l'arrière de l'appareil) correspond à l'un de ceux sur la liste, appelez la ligne du service consommateurs PlayStation® approprié que vous pourrez trouver dans chaque manuel de logiciel au format PlayStation® et PlayStation®2.

Numéros de série		
4108937 – 4110112	4174457 – 4174612	4198514 – 4199917
4110545 – 4111612	4178801 – 4180312	4200014 – 4201417
4112045 – 4113112	4180421 – 4180612	4201514 – 4202917
4113221 – 4116016	4180829 – 4182112	4203014 – 4204417
4116101 – 4116112	4182545 – 4184056	4204514 – 4205377
4116437 – 4119112	4184165 – 4184932	4206014 – 4206769
4142813 – 4143568	4185113 – 4185544	4206878 – 4206985
4143677 – 4144000	4185653 – 4185976	4207094 – 4207417
4145921 – 4147216	4186613 – 4189096	4207514 – 4208917
4149137 – 4150216	4189205 – 4189528	4209014 – 4210417
4150949 – 4161112	4189613 – 4190692	4210514 – 4211917
4168421 – 4168612	4191113 – 4192192	4212014 – 4213309
4170029 – 4170112	4192613 – 4195444	4213514 – 4214917
4171637 – 4172824	4195514 – 4196917	4216514 – 4216621
	4197014 – 4198417	

ADVERTENCIA

Para evitar el riesgo de incendio o de descarga eléctrica, no exponga la unidad a la lluvia ni a la humedad.

Para evitar el riesgo de incendio o de descarga eléctrica, no coloque ningún envase que contenga líquidos encima de la consola.

**Para evitar descargas eléctricas, no desmonte la unidad.
Solicite asistencia técnica únicamente al personal especializado.**

Este equipo ha sido probado y se ha verificado que cumple con los límites establecidos en la Directiva EMC (Compatibilidad Electromagnética) al usar un cable de conexión de menos de 3 metros (9,8 pies).

Aviso Importante

Antes de utilizar este producto en su consola PlayStation®2, revise la siguiente lista de números de serie. Si el número de serie de su consola (situado en la parte trasera de la unidad) coincide con alguno de los números de la lista, póngase en contacto con el servicio de atención al cliente de PlayStation® correspondiente, cuyo número de teléfono encontrará en el respectivo manual de software de formato PlayStation® o PlayStation®2.

Números de serie		
4108937 – 4110112	4174457 – 4174612	4198514 – 4199917
4110545 – 4111612	4178801 – 4180312	4200014 – 4201417
4112045 – 4113112	4180421 – 4180612	4201514 – 4202917
4113221 – 4116016	4180829 – 4182112	4203014 – 4204417
4116101 – 4116112	4182545 – 4184056	4204514 – 4205377
4116437 – 4119112	4184165 – 4184932	4206014 – 4206769
4142813 – 4143568	4185113 – 4185544	4206878 – 4206985
4143677 – 4144000	4185653 – 4185976	4207094 – 4207417
4145921 – 4147216	4186613 – 4189096	4207514 – 4208917
4149137 – 4150216	4189205 – 4189528	4209014 – 4210417
4150949 – 4161112	4189613 – 4190692	4210514 – 4211917
4168421 – 4168612	4191113 – 4192192	4212014 – 4213309
4170029 – 4170112	4192613 – 4195444	4213514 – 4214917
4171637 – 4172824	4195514 – 4196917	4216514 – 4216621
	4197014 – 4198417	

ACHTUNG

Um Feuer und elektrische Schläge zu vermeiden, setzen Sie das Gerät weder Regen noch sonstiger Feuchtigkeit aus.

Um Feuer und elektrische Schläge zu vermeiden, stellen Sie keinen mit Flüssigkeit gefüllten Behälter auf die Konsole.

Um elektrische Schläge zu vermeiden, zerlegen Sie das Gerät nicht. Überlassen Sie Wartungsarbeiten nur qualifiziertem Fachpersonal.

Dieses Produkt wurde getestet und entspricht der EMV-Richtlinie unter Verwendung eines Anschlusskabels mit einer Länge von bis zu 3 Metern (9,8 feet).

Wichtiger Hinweis

Gehen Sie vor Inbetriebnahme Ihrer PlayStation®2-Konsole folgende Liste der Seriennummern durch. Wenn Ihre Seriennummer (sie befindet sich auf der Rückseite der Konsole) auf der Liste steht, wenden Sie sich bitte an die Helpline beim PlayStation®-Kundendienst. Die entsprechende Nummer finden Sie in jedem Software-Handbuch für das PlayStation®- und PlayStation®2-Format.

Seriennummern		
4108937 – 4110112	4174457 – 4174612	4198514 – 4199917
4110545 – 4111612	4178801 – 4180312	4200014 – 4201417
4112045 – 4113112	4180421 – 4180612	4201514 – 4202917
4113221 – 4116016	4180829 – 4182112	4203014 – 4204417
4116101 – 4116112	4182545 – 4184056	4204514 – 4205377
4116437 – 4119112	4184165 – 4184932	4206014 – 4206769
4142813 – 4143568	4185113 – 4185544	4206878 – 4206985
4143677 – 4144000	4185653 – 4185976	4207094 – 4207417
4145921 – 4147216	4186613 – 4189096	4207514 – 4208917
4149137 – 4150216	4189205 – 4189528	4209014 – 4210417
4150949 – 4161112	4189613 – 4190692	4210514 – 4211917
4168421 – 4168612	4191113 – 4192192	4212014 – 4213309
4170029 – 4170112	4192613 – 4195444	4213514 – 4214917
4171637 – 4172824	4195514 – 4196917	4216514 – 4216621
	4197014 – 4198417	

AVVERTENZE

Per prevenire il rischio di scosse elettriche o di incendio, non esporre l'unità alla pioggia o all'umidità.

Per prevenire il rischio di scosse elettriche o di incendio, non poggiare recipienti contenenti liquidi sulla console.

Onde evitare il rischio di scosse elettriche, non smontare alcuna parte dell'unità.

Per eventuali riparazioni rivolgersi esclusivamente a personale qualificato.

Questa unità è stata testata e riconosciuta conforme alle Direttive EMC (compatibilità elettromagnetica), in quanto utilizza un cavo di connessione di lunghezza inferiore ai 3 metri (9,8 piedi).

Avviso Importante

Prima di utilizzare il presente prodotto con la vostra console PlayStation®2, vi preghiamo di esaminare la lista dei numeri di serie riportati di seguito. Qualora il numero di serie della vostra console (riportato sul retro della stessa) dovesse corrispondere ad uno dei numeri della lista, vogliate contattare il servizio clienti PlayStation® di competenza al numero presente all'interno di ogni manuale di software per PlayStation® e PlayStation®2.

Numeri di serie		
4108937 – 4110112	4174457 – 4174612	4198514 – 4199917
4110545 – 4111612	4178801 – 4180312	4200014 – 4201417
4112045 – 4113112	4180421 – 4180612	4201514 – 4202917
4113221 – 4116016	4180829 – 4182112	4203014 – 4204417
4116101 – 4116112	4182545 – 4184056	4204514 – 4205377
4116437 – 4119112	4184165 – 4184932	4206014 – 4206769
4142813 – 4143568	4185113 – 4185544	4206878 – 4206985
4143677 – 4144000	4185653 – 4185976	4207094 – 4207417
4145921 – 4147216	4186613 – 4189096	4207514 – 4208917
4149137 – 4150216	4189205 – 4189528	4209014 – 4210417
4150949 – 4161112	4189613 – 4190692	4210514 – 4211917
4168421 – 4168612	4191113 – 4192192	4212014 – 4213309
4170029 – 4170112	4192613 – 4195444	4213514 – 4214917
4171637 – 4172824	4195514 – 4196917	4216514 – 4216621
	4197014 – 4198417	

WAARSCHUWING

Stel het toestel niet bloot aan regen noch vocht om brand of elektrocutie te voorkomen.

Plaats geen recipiënten met vloeistoffen op de console om brand of elektrocutie te voorkomen.

**Open de behuizing niet om elektrocutie te voorkomen.
Laat het toestel alleen nakijken door bevoegd vakpersoneel.**

Dit toestel is getest en voldoet aan de limieten zoals bepaald in de EMC-Richtlijn indien u een kabel van minder dan 3 meter (9,8 voet) lang gebruikt.

Belangrijke mededeling

Raadpleeg eerst de bijgevoegde lijst met serienummers voordat u dit product met uw PlayStation®2-console gebruikt. Komt het serienummer (dat u achteraan op de console vindt) overeen met een van de serienummers op de lijst, neem dan contact op met de hulplijn van de bevoegde PlayStation®-klantenservice. De contactgegevens vindt u in elke handleiding van software in PlayStation®- en PlayStation®2-formaat.

Serienummers		
4108937 – 4110112	4174457 – 4174612	4198514 – 4199917
4110545 – 4111612	4178801 – 4180312	4200014 – 4201417
4112045 – 4113112	4180421 – 4180612	4201514 – 4202917
4113221 – 4116016	4180829 – 4182112	4203014 – 4204417
4116101 – 4116112	4182545 – 4184056	4204514 – 4205377
4116437 – 4119112	4184165 – 4184932	4206014 – 4206769
4142813 – 4143568	4185113 – 4185544	4206878 – 4206985
4143677 – 4144000	4185653 – 4185976	4207094 – 4207417
4145921 – 4147216	4186613 – 4189096	4207514 – 4208917
4149137 – 4150216	4189205 – 4189528	4209014 – 4210417
4150949 – 4161112	4189613 – 4190692	4210514 – 4211917
4168421 – 4168612	4191113 – 4192192	4212014 – 4213309
4170029 – 4170112	4192613 – 4195444	4213514 – 4214917
4171637 – 4172824	4195514 – 4196917	4216514 – 4216621
	4197014 – 4198417	

AVISO

Para evitar o risco de incêndio ou choque eléctrico, não exponha o aparelho à chuva ou humidade.

Para evitar o risco de incêndio ou choque eléctrico, não coloque recipientes cheios com líquido em cima da unidade.

Para evitar choques eléctricos, não desmonte o aparelho. A assistência técnica só deve ser efectuada por pessoal qualificado.

Este equipamento foi testado e estabelecido, de acordo com os limites expostos pelo Directivo EMC, a utilizar um cabo de ligação de comprimento inferior a 3 metros (9.8 pés).

Aviso Importante

Antes de utilizar este produto com a sua unidade PlayStation®2, favor rever os números de série listados abaixo. Se o seu número de série (localizado na parte traseira da unidade) corresponder a algum dos números da lista, favor contactar o serviço de assistência ao cliente PlayStation® apropriado que se encontra dentro de todo manual de software formato PlayStation® e PlayStation®2.

Números de série		
4108937 – 4110112	4174457 – 4174612	4198514 – 4199917
4110545 – 4111612	4178801 – 4180312	4200014 – 4201417
4112045 – 4113112	4180421 – 4180612	4201514 – 4202917
4113221 – 4116016	4180829 – 4182112	4203014 – 4204417
4116101 – 4116112	4182545 – 4184056	4204514 – 4205377
4116437 – 4119112	4184165 – 4184932	4206014 – 4206769
4142813 – 4143568	4185113 – 4185544	4206878 – 4206985
4143677 – 4144000	4185653 – 4185976	4207094 – 4207417
4145921 – 4147216	4186613 – 4189096	4207514 – 4208917
4149137 – 4150216	4189205 – 4189528	4209014 – 4210417
4150949 – 4161112	4189613 – 4190692	4210514 – 4211917
4168421 – 4168612	4191113 – 4192192	4212014 – 4213309
4170029 – 4170112	4192613 – 4195444	4213514 – 4214917
4171637 – 4172824	4195514 – 4196917	4216514 – 4216621
	4197014 – 4198417	

Table of contents

WARNING	2
About this product	10
Precautions	11
Checking the package contents	14
Part names	15
Installing the Network Adaptor in the PlayStation®2 console	16
Quitting PlayStation®2 format software compatible with the Network Adaptor	19
Removing the Network Adaptor from the PlayStation®2 console	20
Using the Network Adaptor	23
Positioning the console with the Network Adaptor installed	23
Connecting with a network cable	25
Troubleshooting	26
Specifications	28
GUARANTEE	29

About this product

Compatible models

The Network Adaptor (Ethernet) (for PlayStation®2) is designed exclusively for use with the PlayStation®2 console. This product is only intended for networks in the country in which it is sold.

Compatible software

This product can be used with PlayStation®2 format software specified as compatible with the Network Adaptor (for PlayStation®2).

Usage of the Network Adaptor may vary depending on the software in use. Hardware requirements may also vary. For details, refer to the appropriate software manual.

PlayStation®2 format software specified as compatible with the Network Adaptor (for PlayStation®2) is required to use this product.

Notes

- This product can only be used for Ethernet (100Base-TX/10Base-T) connection. It cannot be used for dial-up networking.
- A Memory Card (8MB) (for PlayStation®2) (sold separately) may be required for some applications.
- The Network Adaptor (Ethernet) (for PlayStation®2) is marked with the letters “HLE” to indicate that it can be used in conjunction with the Internal Hard Disk Drive (for PlayStation®2).

Precautions

Safety

This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential for causing fire, electrical shock or personal injury. To help ensure accident-free operation, follow these guidelines:

- Observe all warnings, precautions and instructions.
- Stop use immediately if the device functions in an abnormal manner, or produces unusual sounds or smells.
- Never connect cables of types other than those specified in this instruction manual to the NETWORK connector.
- Do not touch the Network Adaptor during a lightning storm as this may expose you to the risk of electrical shock.
- If the device does not function properly, please contact the appropriate PlayStation® customer service helpline which can be found within every PlayStation® and PlayStation®2 format software manual.

Use and handling

- Do not throw or drop the Network Adaptor, or subject it to strong physical shock.
- Do not place the Network Adaptor on surfaces that are unstable, tilted or subject to vibration.
- Never move or change the position of a console with a Network Adaptor installed while it is switched on.
- Do not expose the Network Adaptor to high temperatures, high humidity or direct sunlight. (Operate in an environment where temperatures range between 5°C – 35°C.)
- Do not place the Network Adaptor in locations subject to sudden temperature change (e.g. temperature changes of 10°C per hour or more).
- Do not use the Network Adaptor in a dusty location.
- Do not allow liquid or small particles to get into the Network Adaptor.

Precautions (continued)

- Do not place the Network Adaptor too close to magnetic fields such as those produced by magnets, loudspeakers or television sets.
- Never disassemble or modify the Network Adaptor.
- Do not put heavy objects onto the Network Adaptor.
- Do not touch the metal parts or insert foreign objects into the connectors of the Network Adaptor.
- When you do not intend to use the unit for an extended period of time, disconnect the mains power plug for the PlayStation®2 console from the mains power socket. This will help to prevent damage to the unit from lightning and power line surges.
- When disconnecting the mains power plug from a mains power socket, pull it out by grasping the plug. Never pull the cord itself.
- Do not connect any unauthorised internal peripheral to the Network Adaptor.
- Do not place any rubber or vinyl materials on the exterior of the Network Adaptor for an extended period of time. Doing so may damage the plastic surface.

Connecting with a network cable

Do not connect network cables or telephone cords of the following types to the NETWORK connector; too much electrical current may pass through the connector, causing a malfunction, excessive heat or fire in the connector:

- Network cables of types other than 100Base-TX and 10Base-T
- Normal telephone lines
- The jack of an ISDN (digital) compatible public phone
- PBX phone lines
- Telephone lines for home networks or business phones
- Other types of telephone lines

Moisture condensation

If brought directly from a cold location to a warm one, moisture may condense on the outside or inside of the Network Adaptor. Should this occur, the Network Adaptor may not operate properly. In this case, turn the PlayStation®2 console off using the MAIN POWER switch on the console rear, and disconnect the mains power plug from the mains power socket until the moisture evaporates (this could take several hours). If the console or Network Adaptor still does not operate properly after this period of time, please contact the appropriate PlayStation® customer service helpline which can be found within every PlayStation® and PlayStation®2 format software manual.

Cleaning the Network Adaptor

For safety reasons, before cleaning the Network Adaptor, 1) turn off the PlayStation®2 console using the MAIN POWER switch, 2) disconnect the mains power plug from the mains power socket and, 3) remove the network cable from the Network Adaptor.

- Do not use benzene or paint thinner to clean the exterior of the Network Adaptor since these may damage the surface or cause the paint to peel off. When using a chemically-treated dust cloth, follow the usage instructions supplied with it.
- If the exterior of the Network Adaptor becomes dirty, soak a soft cloth in a mild detergent solution diluted with water, tightly squeeze the cloth to remove the excess liquid, wipe the affected area of the exterior, and finish by wiping with a dry cloth.

 
Never disassemble the Network Adaptor

Use the Network Adaptor in accordance with this instruction manual. No authorisation for the analysis or modification of the Network Adaptor, or the analysis and use of its circuit configurations is provided.

Checking the package contents

Check that you have the following items:

- **Network Adaptor (Ethernet) (for PlayStation®2) (1)**

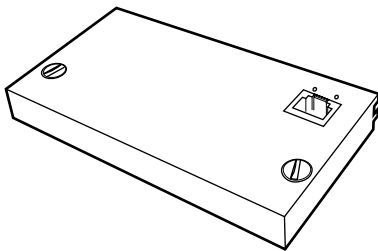


- **Instruction manual (1)**
- **PlayStation®2 format software (1 set)**

If any items are missing, please contact the appropriate PlayStation® customer service helpline which can be found within every PlayStation® and PlayStation®2 format software manual.


Part names

 Front

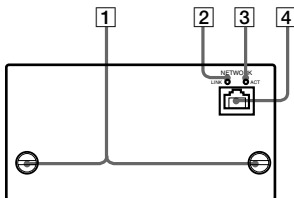

- 1 Mounting screws**
To fasten the Network Adaptor to the PlayStation®2 console.
- 2 LINK indicator**
Lights up while connected to a network.
- 3 ACT (active) indicator**
Lights up when transferring data to and from the network.
- 4 NETWORK connector**
Insert network cable (100Base-TX/10Base-T) here for Ethernet connection.

 Rear

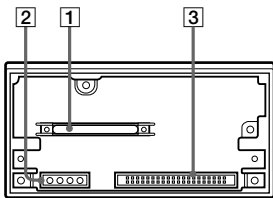

- 1 Console connector**
Connect to the expansion bus connector of the PlayStation®2 console.
- 2 HDD power connector**
- 3 HDD data connector**

Warning

Never connect cables of types other than those specified in this instruction manual to the NETWORK connector. For details, see "Connecting with a network cable" (page 25).

 
Installing the Network Adaptor in the PlayStation®2 console

Caution

- Check that the MAIN POWER switch on the PlayStation®2 console rear has been switched off before installing the Network Adaptor.
- For safety reasons, do not connect the mains power plug for the PlayStation®2 console to a mains power socket until installation is completed.


1 Remove the EXPANSION BAY cover from the PlayStation®2 console rear.

Use the indentation at the top of the EXPANSION BAY cover as a finger grip to help pull the cover free from the console. After removing, keep the cover in a safe place for future use.

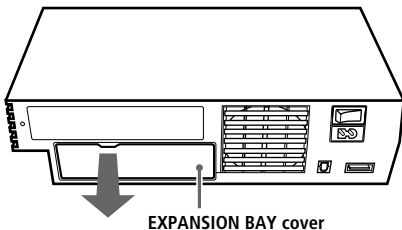

PlayStation®2
console rear

 2 Install the Network Adaptor in the PlayStation®2 console rear.

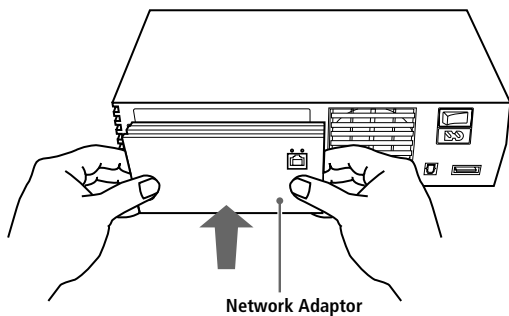


Installing the Network Adaptor in the PlayStation®2 console (continued)

3 Fasten the Network Adaptor to the PlayStation®2 console.

Turn the mounting screws in a clockwise direction using a coin. Do not overtighten.



 Notes

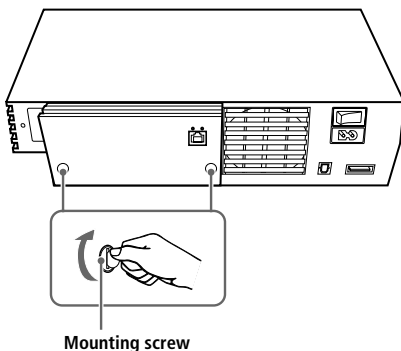- Do not use a screwdriver to tighten the mounting screws.
- Do not fasten the mounting screws too tightly, as this may damage the screws or console.




 
4 Connect a network cable to the Network Adaptor.

For details, refer to "Connecting with a network cable" (page 25).

 

-
- 5** Insert the mains power plug for the PlayStation®2 console into a mains power socket.
 - 6** Turn on the PlayStation®2 console using the MAIN POWER switch.
 - 7** Press the  (standby)/RESET button on the console front, and check that the main menu appears. The  (standby) indicator turns green.

Quitting PlayStation®2 format software compatible with the Network Adaptor

To quit a software title, follow the on-screen instructions or the instructions supplied with the software manual. If you cannot find instructions, you can quit by pressing the  (standby)/RESET button on the PlayStation®2 console front.

When playing PlayStation®2 format software compatible with the Network Adaptor (Ethernet) (for PlayStation®2), in some cases, you may not be able to reset a game even if you press the /RESET button.


Note

If you are not able to quit a software title by the method described above, you can force the software to quit by pressing and holding down the /RESET button, until the  indicator turns red and the console enters standby mode.

Removing the Network Adaptor from the PlayStation®2 console

Caution

 In some cases, the PlayStation®2 console may become hot to the touch after being used. Be careful when removing the Network Adaptor from the console.


- 1** Make sure that the  (standby) indicator on the PlayStation®2 console front is lit up in red, then turn off the PlayStation®2 console using the MAIN POWER switch.
- 2** Disconnect the mains power plug for the PlayStation®2 console from the mains power socket.
- 3** Disconnect the network cable from the Network Adaptor.

4 Loosen the mounting screws.

Turn the mounting screws in a counterclockwise direction using a coin.

Note

 
Do not use a screwdriver to loosen the mounting screws.

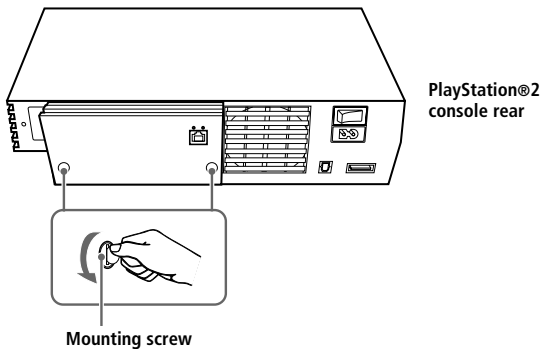

Removing the Network Adaptor from the PlayStation®2 console (continued)

5 Remove the Network Adaptor from the console.

 Remove the Network Adaptor by pulling it away from the console.

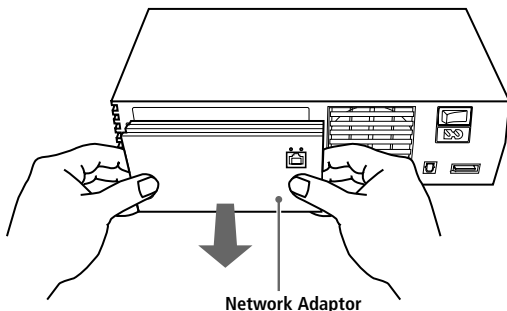

6 Cover the EXPANSION BAY.

After removing the Network Adaptor, reattach the EXPANSION BAY cover to help protect the expansion bus connector, which is located within the EXPANSION BAY.

Using the Network Adaptor

Positioning the console with the Network Adaptor installed

You can place the PlayStation®2 console with the Network Adaptor installed in either the vertical or horizontal position.

Caution

 
- Do not change the position of the console while it is in operation. Doing so may cause the console to malfunction.
- Do not place the console in any position other than vertical or horizontal as doing so may damage it.
- Never move the console in such a way that the installed Network Adaptor will be exposed to strong physical shock or vibration.

Using the Network Adaptor (continued)

When placing the PlayStation®2 console with the Network Adaptor installed in the vertical position, use the SCPH-10040 E Vertical Stand (for PlayStation®2) (sold separately).


For details, refer to the instructions supplied with the Vertical Stand (for PlayStation®2).

Vertical position

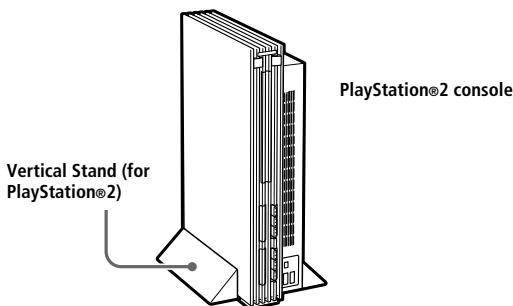

If a Vertical Stand (for PlayStation®2) is not available, set the console in the horizontal position as shown below.

 Horizontal position

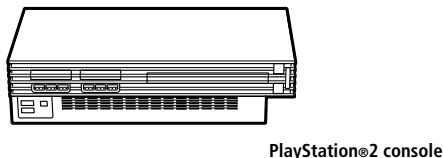

Connecting with a network cable

You can connect the PlayStation®2 console to a network via the NETWORK connector on a Network Adaptor (Ethernet) (for PlayStation®2) installed in the PlayStation®2 console.

You can connect to a 100 mbps network using 100Base-TX cable or to a 10 mbps network using 10Base-T cable. For details, refer to the instructions supplied with the network device you are connecting to (such as a router, DSL modem or cable modem).

Warning

There is a protective sticker on the NETWORK connector to help prevent accidental connection of the wrong type of cable. Remove the sticker the first time you use the NETWORK connector. After you have removed the sticker, be careful not to connect cables of the wrong type to the NETWORK connector.

Do not connect network cables or telephone cords of the following types to the NETWORK connector; too much electrical current may pass through the connector, causing a malfunction, excessive heat or fire in the connector:

- Network cables of types other than 100Base-TX and 10Base-T
- Normal telephone lines
- The jack of an ISDN (digital) compatible public phone
- PBX phone lines
- Telephone lines for home networks or business phones
- Other types of telephone lines

Caution

When you connect to a network, the Internet service provider may charge a usage fee. For details, refer to the instructions provided with the software in use or contact your Internet service provider.

Troubleshooting

Please refer to this section if you experience difficulty in using the Network Adaptor.

If you experience any of the following difficulties, use this troubleshooting guide to help remedy the problem before requesting repair. Refer also to the troubleshooting section of the PlayStation®2 console instruction manual.

Should any problem persist, please contact the appropriate PlayStation® customer service helpline which can be found within every PlayStation® and PlayStation®2 format software manual.

Trouble with items other than the Network Adaptor

The instructions provided here are for the Network Adaptor only. If you experience difficulty with peripheral items or software sold separately, refer to the appropriate instruction manual or contact the appropriate PlayStation® customer service helpline which can be found within every PlayStation® and PlayStation®2 format software manual.

A connection to the network cannot be established.

- The mains power plug for the PlayStation®2 console is not fully inserted into the mains power socket.
Check that the mains power plug is fully inserted into the mains power socket.
- The Network Adaptor is not properly installed in the console.
Check that the Network Adaptor is properly installed in the console.

-
- A PlayStation®2 format software disc compatible with the Network Adaptor is not inserted in the console.
Insert a PlayStation®2 format software disc compatible with the Network Adaptor in the console.
 - You are using PlayStation®2 format software that is not compatible with the Network Adaptor.
Insert a PlayStation®2 format software disc compatible with the Network Adaptor in the console.
 - The network settings are not correct.
Refer to the instructions for the software in use and adjust the settings as necessary.
 - The network is busy.
Wait a few minutes, then try to access the network again.
 - The network cable is not properly connected.
Check that the network cable is properly connected.
 - The type of network cable is not correct.
Use the correct type of cable. For details refer to the instructions for the network device (router, DSL modem, etc.) you are connecting to.
 - The port or settings for the network device (router, DSL modem, etc.) are not correct.
Refer to the instructions for the network device and make the appropriate connections or settings.

Specifications

Dimensions (approx.)

133 × 73 × 28 mm (w/h/d)

Weight (approx.)

150 g

Operating temperature

5°C – 35°C

Inputs/outputs on the Network Adaptor front

NETWORK connector (1)

Inputs/outputs on the Network Adaptor rear

HDD data connector (1)

HDD power connector (1)

Console connector (1)

Indicators

LINK indicator (1)

ACT (active) indicator (1)

Design and specifications are subject to change without notice.

GUARANTEE

GUARANTEE

Thank you for buying this Product.

Sony Computer Entertainment Europe (“SCEE”) will, for a period of 1 (one) year from the date of original purchase, repair or (at SCEE’s option) replace any component part of this Product, free of charge, where it is faulty due to defective materials or workmanship. Replacement will be with a new or refurbished component or unit, at SCEE’s option.

This Guarantee is in addition to your statutory consumer rights (under applicable law) and does not affect them in any way.

Sony Computer Entertainment Europe
30 Golden Square, London W1F 9LD UK

IMPORTANT

1. If you need to claim under this Guarantee, please call your local Customer Service Helpline (listed in a current software manual) for return instructions and other guidance.
2. This Guarantee is only valid:
 - i. in Australia, Austria, Belgium, France, Germany, Ireland, Italy, Luxembourg, the Netherlands, New Zealand, Portugal, Spain, Switzerland and the UK;
 - ii. when the original sales receipt or invoice (indicating the date of purchase and retailer’s name) is presented together with the faulty Product (and has not been altered or defaced since the date of original purchase);
 - iii. when the Guarantee seal on the Product has not been damaged or removed.
3. You may not claim under this Guarantee when the Product is damaged as a result of:
 - i. commercial use, accident, fair wear and tear or misuse (including, without limitation, failure to use this Product for its normal purpose and/or in accordance with instructions on proper use and maintenance, or installation or use in a manner inconsistent with applicable local technical or safety standards);

GUARANTEE (continued)

- ii. use in conjunction with any unauthorised peripheral (including, without limitation, game enhancement devices, adaptors and power supply devices);
 - iii. any adaptation or adjustment to, or alteration of, this Product carried out for any reason, and whether properly carried out or not;
 - iv. maintenance or repairs carried out other than by an authorised service facility.
4. Where permitted under applicable law, this Guarantee will be your sole and exclusive remedy for breach of any warranty, guarantee or condition, express or implied, in respect of this Product and neither SCEE nor any other Sony entity, or their suppliers or authorised service facilities, will be liable for any incidental or consequential loss or damage.

If this Product needs any repair which is not covered by this Guarantee, please call your local Customer Service Helpline for advice. If your home country is not one of those listed, please contact your retailer.



“PS”, “PlayStation” and “ SCE ” are registered trademarks of Sony Computer Entertainment Inc.

“SONY” and “ SONY ” are registered trademarks of Sony Corporation.

Printed in Japan

www.playstation.com