

SONY

PlayStation VR2 Sense™ Controller Charging Station / وحدة شحن وحدة التحكم

دليل الإرشادات/ Instruction Manual

CFI-ZSS1



Health and Safety

Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference. Parents or guardians of children should read this manual for safe use.

This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential for causing fire, electrical shock or personal injury. Observe all warnings, precautions, and instructions. Stop use and disconnect the AC power cord immediately if the product functions in an abnormal manner, produces unusual sounds or smells or becomes too hot to touch.

M Warning

YOUNG CHILDREN INJURIES

CHOKING HAZARD – Small parts. Keep the product out of the reach of young children. Young children may swallow small parts or may wrap the cables around themselves, which may inflict injury or cause an accident or a malfunction.

NEVER DISASSEMBLE OR MODIFY THE PRODUCT OR ACCESSORIES

There is a risk of fire, electric shock, or injury.

MAGNETS AND MEDICAL DEVICES

This product has magnets which may interfere with pacemakers, defibrillators and programmable shunt valves or other medical devices. Do not place this product close to such medical devices or persons who use such medical devices. Consult your doctor before using this product if you use such medical devices.

⚠ Precautions

AC adaptor and AC power cord

- Only use the AC adaptor, charging adaptor and AC power cord included with the product. The AC adaptor and AC power cord are designed specifically for use with this product only, and the charging adaptor is for the PlayStation VR2 Sense™ controller only. Do not use them with any other products.
- Do not connect the AC power cord to a voltage transformer or inverter. Connecting the cord to a voltage transformer for overseas travel or an inverter for use in a vehicle may cause it to heat up in the AC adaptor and may cause burns or a malfunction.
- Unplug the cord and cables if you want to clean or move the product or do not intend to use it for an extended period of time. When disconnecting, hold the cord by the plug and pull straight out of the socket. Never pull by the cord and do not pull out at an angle.

Liquid, dust, smoke, steam, and heat

- Always ensure the product and its connectors are free of liquid, excess dust and small particles.
- Do not leave the product in the following areas during use, storage, or transportation.
- Areas exposed to smoke or steam
- Areas with high humidity, dust, or cigarette smoke
- Areas near heating appliances, areas exposed to direct sunlight, or areas that retain heat

Set up and handling

- Do not use the cords if they are damaged or modified.

 Do not place heavy items on the product adoptors.
- Do not place heavy items on the product, adaptor or cord, throw or drop the product, or otherwise expose it to strong physical impact.
- Do not place the product on surfaces that are unstable, tilted, or subject to vibration.
- Do not leave the product on the floor
 Do not walk on the cord or cables or or cab
- Do not walk on the cord or cables or pinch them, particularly at plugs, receptacles, connectors and where they exit from the product.
 Do not pull or bend the cord with excessive force.
- Do not touch the plugs, connectors or insert any foreign objects into them or the product.
- Arrange the cables carefully to avoid tripping over them.Do not swing the product or adaptor around by their cord.
- Do not expose the product, battery, or accessories to high temperatures, high humidity, or direct sunlight during operation, transportation, and storage.

Use and handling

Never disassemble or modify the product or accessories

Use the product and accessories according to the instructions in this manual. No authorisation for the analysis or modification of the product, or the analysis and use of its circuit configurations, is provided. Unauthorised modification of the product will void your manufacturer's guarantee.

Care and cleaning


Follow the precautions below to help prevent the product exterior from deteriorating or discolouring.

- Do not apply volatile substances such as insecticide.
- Do not allow rubber or vinyl materials to be in prolonged contact with the product.
- Do not use thinner, benzine, or alcohol. Avoid using wipes, chemically-treated cloths, and other products that contain such substances
- Wipe with a soft, dry cloth.


Charging

1 Connect the supplied AC power cord to the supplied AC adaptor. Then, connect the AC adaptor to the DC IN connector on the charging station.


Make all connections before plugging the AC power cord into an electrical outlet.

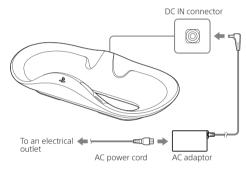

2 Attach the charging adaptors to the PlayStation VR2 Sense™ controller.

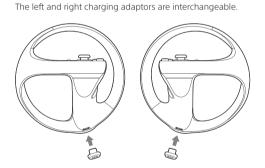

3 Attach each of the controllers to the charging station. With the charging adaptors attached, insert each controller into the charging station's connector. The controller's status indicator will slowly blink white and turn off when charging is complete.

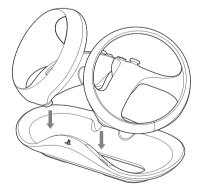

Do not use the controllers while charging.
The charging station can charge a right and left controller at the same time.

To remove the controller

Lift the controller out of the charging station to remove it.

You can still use the controller while the charging adaptor is

Charging time

It takes approximately 1.5 hours to charge the controllers when the battery has no remaining charge.

Specifications

Ratings: Charging Station	input 5.1 V
Ratings: AC adaptor	input 100-240 V ~ 0.4 A 50/60 Hz output 5.1 V 2.8 A
External dimensions (w × h × d)	Approx. 241 × 59 × 135 mm
Mass	Approx. 391 g
Operating temperature	5 °C to 35 °C
Country of production	China

Design and specifications are subject to change without notice.

Compliance Information

This product has been manufactured by or on behalf of Sony Interactive Entertainment Inc., 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan.

Imported into the United Kingdom and distributed by Sony Interactive Entertainment Europe Limited, 10 Great Marlborough Street, London, W1F 7LP, United Kingdom.

Inquiries related to product compliance in the UK should be sent to the manufacturer's authorised representative, Sony Europe B.V., The Heights, Brooklands, Weybridge, Surrey KT13 OXW, United

Imported into Europe and distributed by (except the UK) Sony Interactive Entertainment Ireland Limited, 2nd Floor, 2/3 Rogers Lane, Dublin 2, Ireland.

Inquiries related to product compliance in the EU should be sent to the manufacturer's authorised representative, Sony Belgium, bijkantoor van Sony Europe B.V., Da Vincilaan 7-D1, 1930 Zaventem, Belgium.

NOTICE FOR CUSTOMERS IN THE UNITED KINGDOM

A moulded plug complying with BS1363 is fitted to this equipment for your safety and convenience. Should the fuse in the plug supplied need to be replaced, a 5AMP fuse approved by ASTA or BSI to BS1362, (i.e., marked with ♠ or ❤ mark) must be used. If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

Product Ecodesign

For customers in EU

For information based on the EU Ecodesign requirements of the Regulation (EU) No 2019/1782 visit the following URL:playstation. com/ecodesign

For customers in UK

For information based on the Ecodesign for Energy-Related Products and Energy Information (amendment) (EU Exit) Regulations 2020 visit the following URL:playstation.com/ecodesign

For customers in the EU, UK and Turkey



Where you see this symbol on any of our electrical products or packaging, it indicates that the relevant electrical product should not be disposed of as general household waste in the EU, UK, Turkey, or other countries with separate waste collection systems available. To ensure correct waste treatment, please dispose of them via an authorised collection facility, in accordance with any applicable laws or requirements. Waste electrical products may also be disposed of free of charge via retailers when buying a new product of the same type. Furthermore, within the UK and EU countries larger retailers may accept small waste electronic products free of charge. Please ask your local retailer if this service is available for the products you wish to dispose of. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste

GUARANTEE

This product is covered for 12 months from date of purchase by the manufacturer's guarantee. Please refer to the guarantee supplied in the PlayStation®5 package for full details.

الصحة والسلامة

قبل استخدام هذا المنتج، اقرأ بعناية هذا الدليل وأي أدلة خاصة بالأجهزة المتوافقة. احتفظ بالتعليمات للرجوع إليها في المستقبل. ينبغي أن يقرأ الأبوان أو أولياء أمور الأطفال هذا الدليل لمعرفة كيفية الاستخدام الآمن.

تم تصميم هذا المنتج مع مراعاة أعلى درجات السلامة. ولكن قد يتسِبب أي جهاز م مسيسة ، المسيح هر طرحه الغير فراجات المستد. وتحل في تشبب بي بهر كهربائي – في حالة استخدامه بصورة غير سليمة – في نشوب حريق أو ددوث صدمة كهربائية أو إصابة شخصية. ادرص على مراعاة كل التحذيرات والاحتياطات والتعليمات. توقف عن الاستخدام وافصل سلك التيار الكهربائي على الفور إذا كان المنتج يعمل بصورة غير طبيعية، أو إذا صدرت عنه أصوات أو روائد غير معتادة، أو إذا زادت حرارته بدرجة يصعب معها لُمسه.

∆ تحذیر

إصابات الأطفال الصغار

خطر الاختناق - أجزاء صغيرة. احفظ المِنتج بعيدًا عن متناول الأطِفال الصغار. قد يبلغ الأطفال الصغار الأجزاء الصغيرة أو قد يلغون الكيلات حول أنفسهم، مما قد يُحدث إصابة أو يتسبب في وقوع حادث أو عُطل وظيفي.

امتنع نهائيًا عن تفكيك المنتج أو الملحقات أو إجراء أي تعديل على

هنَّاك خطر نشوب حريق أو حدوث صدمة كهربائية أو إصابة.

الأجزاء المغناطيسية والأجهزة الطبية

يحتوي هذا المنتج على أجزاء معناطيسية قد تتداخل مع عمل أجهزة تنظيم ضربات القلب وأجهزة إزالة الرجفان وصمامات التحويل القابلة للبرمجة أو الأجهزة الطبية الأخرى. لا تضع هذا المنتج بالقرب من مثل هذه الأجهزة الطبية أو الأشخاص الذين يستخدمونها. استشر طبيبك قبل استخدام هذا المنتج في حالة استخدام

🗘 الاحتياطات

محوّل AC وسلك التيار الكهربائي

- لا تستخدم إلا محوّل AC ومحوّل الشحن وسلك التيار الكهربائي المضمنين مع المنتج. يتم تصميم محوّل AC (التيار المتردد) وسلك التيار الكهربائي للاستخدام مع هذا المنتج تحديدًا فقط، وتم تخصيص محوّل الشحن للاستخدام مع وحدة التحكم ⊯PlayStation VR2 Sense فقط. لا تستخدم هذه العناصر مع أي
- لا تحل سلك التيار الكهربائي بمحوّل جهد كهربائي أو عاكس جهد كهربائي (إنفرتر). فقد يؤدي توصيل السلك بمحول جهد كهربائي للسفر في الخارج أو بْعَاكُسْ جهد كُهِرِبْآئِي مَحْصَص للاستخدام في السيّارة إلى سخُونتُه في مُحوّل AC مما قد يؤدي إلى حدوثِ حروق أو أعطال.
- ح. ، سه سد يوجي بني حدوث بروق او اعصان. افضل السلك والكبلات إذا أردت تنظيف المنتج أو تحريكه أو في حالة عدم الرغبة في استخدامه لفترة زمنية طويلة. عند فصل السلك، أمسك السلك من القابس واسحبه في اتجاه مستقيم إلى خارج المقبس. لا تسحب من السلك مطلقًا ولا تسحب بزاوية.

السوائل والغبار والدخان والبخار والحرارة

- تأكد دائمًا من خلو المنتج وموصلاته من السوائل والغبار الزائد والجزيئات
 - لا تترك المنتج في المناطق التالية أثناء الاستخدام أو التخزين أو النقل. – المناطق المعرضة للدخان أو البخار
 - المناطق مرتفعة الرطوبة أو الغبار أو دخان السجائر

الإعداد والمناولة • لا تستخدم الأسلاك في حالة تلفها أو تعديلها.

- لا تضع أحسامًا ثقيلة على المنتج أو المحوّل أو السلك أو تقم بإلقاء المنتج أو إسقاطه، أو تعريضه بأي طريقة أخرى لصدمة مادية قوية.
 - لًا تضع المنتج على الأُسطح غير المُستقرة أو المائلة أو المعرضة للاهتزاز.
- لا تترك المنتج على الأرض. لا تمش على السلك أو الكبلات أو تضغط عليها، خاصةً عند القوابس والمقابس والموصلات وأماكن خروجها من المنتج.
 - لا تسحب السلك أو تقم بثنيه بقوة مفرطة
- لا تلمس القوابس أو الموصلات أو تُدخل أي أجسام غريبة فيها أو في المنتج.
 - رتب الكبلات بحرص لتجنب التعثر بها. • لا تؤرجح المنتج أو المحوّل من سلكه.
- لا تعرضُ المنتحَ أو البطاية أو الملحقات إلى درجات حرارة أو رطوبة مرتفعة أو إلى ضوء شمس مباشر أثناء التشغيل والنقل والتخزين.

الاستخدام والمناولة

امتنع نهائيًا عن تفكيك المنتج أو الملحقات أو إجراء أي تعديل على أي منها

استخدم المنتج والملحقات وفقًا للتعليمات الواردة في هذا الدليل. لا يوجد تصريح بتحليل المنتج أو تعديله، أو تحليل أو استخدام تكوينات دائرته الكهربائية. سيؤدي التعديل غير المصرح به للمنتج إلى إبطال ضمان الجهة المصنعة.

العناية والتنظيف


اتبع الاحتياطات أدناه للمساعدة في منع تدهور حالة الجزء الخارجي للمنتج أو تغير

- لا تضع موادًا متطايرة مثل مبيدات ِالحشرات.
- لا تسمح بملامسة المنتج للمطاط أو مواد الفينيل لفترة طويلة. • لا تستخدم المواد المخففة للدهان أو البنزين أو الكحول. تجنب استخدام
- المناديل المبللة والأقمشة المعالجة كيميائيًا والمنتجات الأخرى التي تحتوي على هذه المواد.
 - امسح بقطعة قماش ناعمة وجافة.


الشحن

قم بتوصيل سلك التيار الكهربائي المزود بمحوّل AC المقدّم مع المنتج. قم بعد ذلك بتوصيل محوّل AC بموصّل DC IN على وحدة


قم بإجراء جميع التوصيلات قبل إدخال سلك التيار الكهربائي في مأخذ التيار

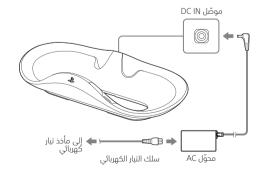

قم بتوصيل محوّلات الشحن بوحدة تحكم ™PlayStation VR2 Sense. بمكن تبدل أوضاع محوّل الشحن الأيسر والأيمن فيما بينهما.

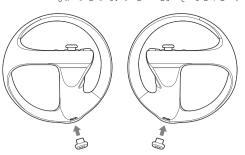

3 قم بتوصیل کل وحدة من وحدات التحکم بوحدة الشحن. بعد توصيل محوّلات الشدن. أَدخل كل وحدة تحكم في موصل وحدة الشحن. سيومض مؤشر حالة وحدة التحكم باللون الأبيض ببطء وينطفئ عند اكتمال

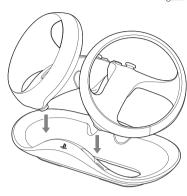

• لا تستخدم وحدات التحكم أثناء الشحن. • بإمكان وحدة الشحن أن تقوم بشحن وحدة تحكم يُمني ويُسرى فّي نفس الوقت.

لإزالة وحدة التحكم

ارفع وحدة التحكم خارج وحدة الشحن لإزالتها. ما يزال بإمكانك استخدام وحدة التحكم أثناء توصيل محوّل الشحن.

زمن الشحن

يستغرق شحن وحدات التحكم 1.5 ساعة تقريبًا عند عدم وجود شحن متبق في

المواصفات

الأبعاد الخارجية (عرض × ارتفاع الخارجية (عرض × ارتفاع × 241 ملم تن × عمق)	الدخل 5.1 فولت ⊷
× عمق)	الدخل 240-100 فولت ~ 0.4 أمبير 50/60 هرتز الخرج 5.1 فولت 2.8 أمبير
المنن 391 : تقساً	135 × 59 × 135 ملم تقریبًا
الوال	391 غ تقریبًا
درجة حرارة التشغيل 5 مئوية إلى 35 مئوية	5 مئوية إلى 35 مئوية
بلد الإنتاج الصين	الصين

التصميم والمواصفات عرُضة للتغيير دون إشعار.

الضمان

هذا المنتج خاضع لتغطية الضمان لمدة 12 شهرًا من تاريخ شرائه من خلال ضمان الشركة المصنعة. يُرجى مراجعة الضمان المرفق في حزمة جهاز PlayStation®5 للحصول على التفاصيلَ الكاملةُ.

تم تصنيع هذا المنتج بواسطة أو بالنيابة عن شركة Tony Interactive Entertainment Inc., 1-7-1 Konan Minato-ku Tokyo, .108-0075 Japan

"", "PlayStation" and "PlayStation VR2 Sense" are registered trademarks or trademarks of Sony Interactive Entertainment Inc. "SONY" and " are registered trademarks or trademarks

تعد "هـ" و"PlayStation VR2 Sense" و"PlayStation" علامات تجارية مسجلة أو علامات تجارية لشركةSony Interactive Entertainment Inc

تعد "SONY" و "هماله الله علامتين تجاريتين مسجلتين أو علامتين تجاريتين لشركة Sony Group Corporation.



of Sony Group Corporation

C€ KK ▲ © 2023 Sony Interactive Entertainment Inc.

Printed in China